MONSOON MULTIMEDIA

# VULKANOLAVA

# User Guide

MONSOON
MULTIMEDIA

VULKANO

© 2011 Monsoon Multimedia, Inc. All Rights Reserved.

# Contents


Introduction ..... 2

Hook Up The Cables ..... 4

Configure Your Vulkano ..... 7

Configure Your Vulkano From Your TV ..... 7

Using Your Vulkano ..... 15

Watch TV ..... 15

Watch Remote TV ..... 17

TV Guide ..... 20

My Recordings ..... 25

Home Media ..... 28

Internet Apps ..... 30

Settings ..... 32

Help ..... 35

Vulkano Setup For PC/Mac ..... 36

Vulkano Setup For Windows 7 And Vista ..... 36

Vulkano Setup For Windows XP ..... 40

Vulkano Setup For PC (Continued) ..... 44

Vulkano Setup For Mac ..... 48

Setup The STB Control ..... 55

Download And Install Players ..... 57

Frequently Asked Questions ..... 58

Troubleshooting ..... 58

Support ..... 58

# INTRODUCTION

Vulkano is a sleek and stylish consumer device that connects to your television STB (Set Top Box), and enables a complete television and Internet media experience on your Smartphone, iPhone, iPad, PC, Mac and big-screen television. Vulkano allows you to enjoy live and recorded television, videos, photos and music on multiple devices.

## WHAT'S IN THE BOX

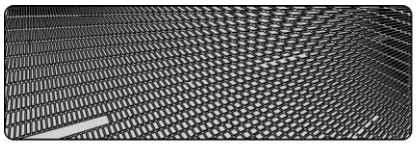

Vulkano unit

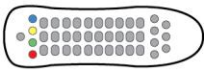

Remote control

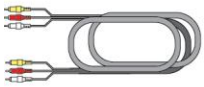

2 Composite cables

HDMI cable

10/100/1000 Ethernet cable

2 Component cables

IR blaster cable

Power adapter

## REMOTE CONTROL

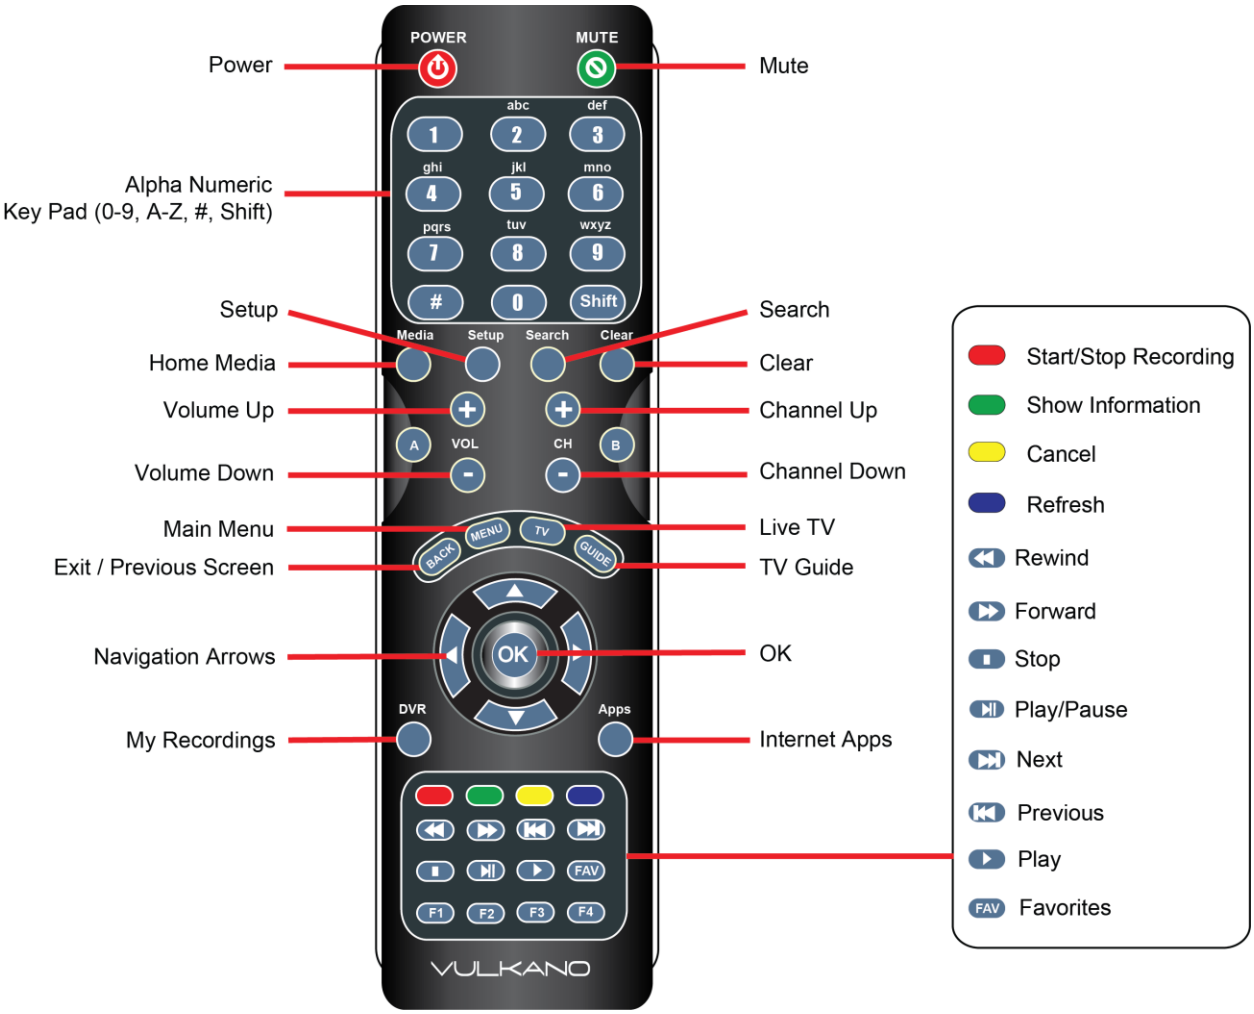


## VULKANO UNIT

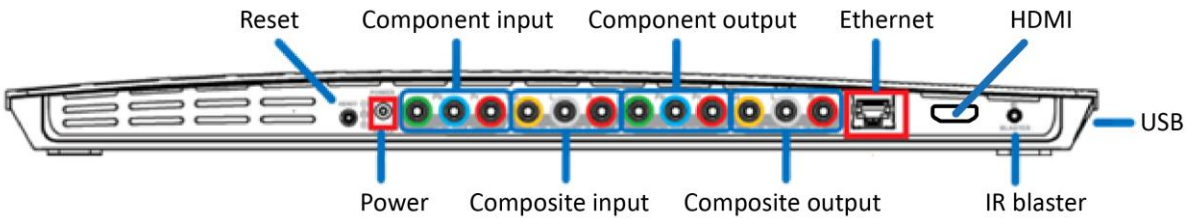

# HOOK UP THE CABLES

Congratulations on buying your Vulkano. We will take you through a few simple steps to get you up and running. You can also setup your Vulkano from your PC. If you cannot set up your Vulkano through your TV, please refer to the Vulkano Setup For PC/Mac section on page 36.

## CONNECT VULKANO TO YOUR STB

Your STB has output connectors on the back for Component setup, Composite setup or both. If you have both, use the Component setup for better video quality. You will need a STB to use Vulkano.

Connect the cables from your STB *output* connectors to your Vulkano's *input* connectors as shown below. For the Component setup option, you will use two sets of cables. For the Composite option, you will only use one set.

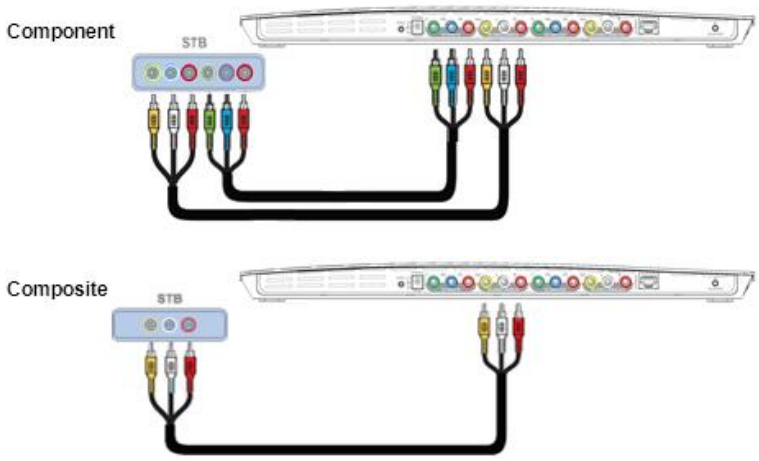


**Suggestion:** Be sure to write down your STB brand and model number. You will need it later in the setup process.

## CONNECT VULKANO TO YOUR TV

This step assumes that your STB was previously connected to your TV. You will re-use your existing cables. For the setup process, it is not mandatory to connect your Vulkano output to a TV. Your TV has audio and video input connectors for Component setup, Composite setup or both. Make sure you use the same cable types, either Component or Composite, for this connection as used in the previous section.

Connect the cables from your Vulkano *output* connectors to your TV's *input* connectors, as shown below. For the Component setup option, you will use two sets of cables. For the Composite option, you will only use one set.

If your TV has an HDMI input connector, use the HDMI setup option for better audio and video quality.

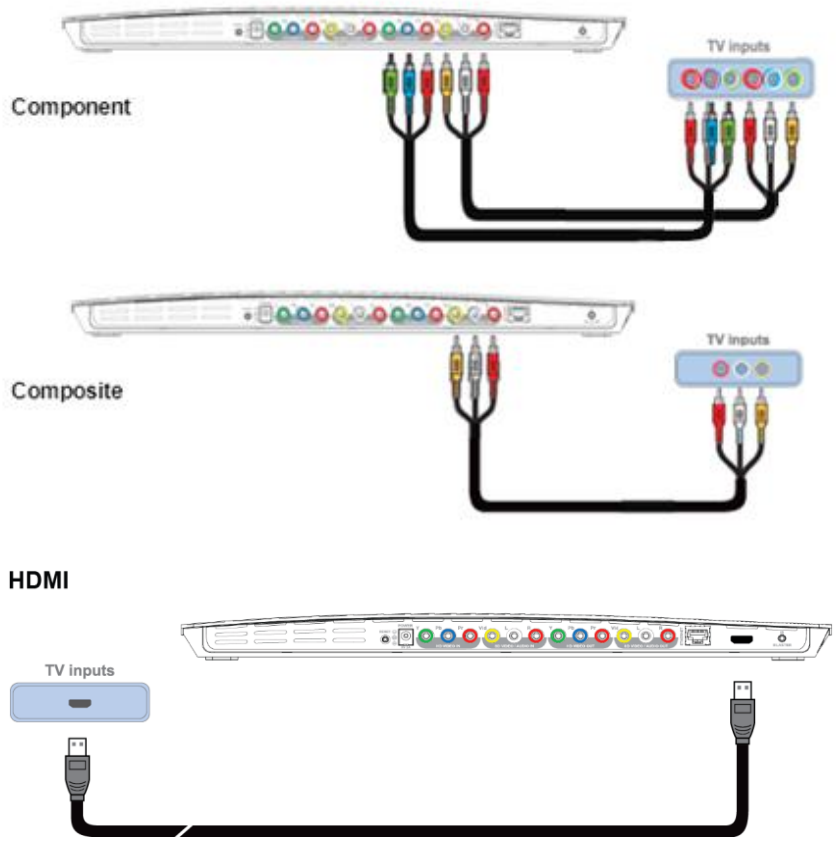

## CONNECT VULKANO TO THE HOME NETWORK

Vulkano can work on your home network, whether it is Wi-Fi or Ethernet.

- **If using Wi-Fi**: You will configure Vulkano's Wi-Fi during the setup process
- **If using Ethernet**: Connect your Vulkano to your router as shown

## CONNECT VULKANO TO THE POWER ADAPTOR

Plug the power adapter into your Vulkano and a wall plug or power strip.

## CONFIGURE YOUR VULKANO

This section describes how to setup your Vulkano from your TV, using your Vulkano remote control.

**Note:** Before you begin setup, use your TV remote to select the proper input source (Composite, Component or HDMI).

## CONFIGURE YOUR VULKANO FROM YOUR TV

After switching on your Vulkano, the Get Started screen will be displayed on your television.

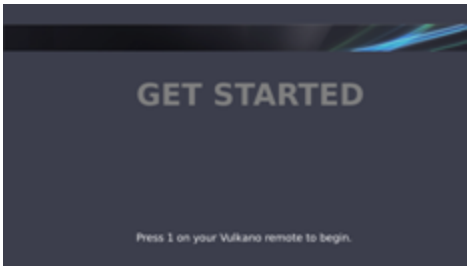


If you have connected your Vulkano to your TV with the HDMI input:

- Press "**1**" on your Vulkano remote

If you have connected your Vulkano to your TV with the Composite output:

- Press "**2**: on your Vulkano remote

If you have connected your Vulkano to your TV with the Component input:

- Press "**OK**" on your Vulkano remote

**Note:** The Get Started screen is only displayed for a short period of time. This is normal. If you have not pressed "**1**", "**2**", or "**OK**" when the Get Started screen is displayed, don't worry. The Get Started screen will be re-displayed momentarily.

## ETHERNET (WIRED) HOME NETWORKS

If you connected your Vulkano to your router using Ethernet, the Network Configuration screen will be displayed.

- Press **OK**

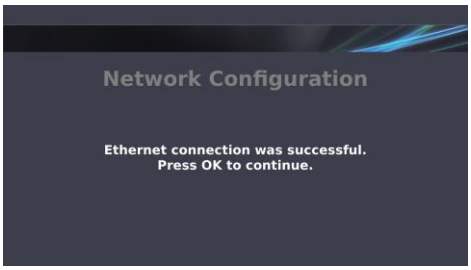

# WIRELESS NETWORK NAME

You have the option to either select or manually input a wireless network name.

### *Select a wireless network name*

Using the Arrow buttons on your Vulkano remote:

1. Select your wireless network
2. Press **OK**

Enter Network Password
Enter the key or passphrase associated with 'Apple Network GSW' and press OK.
Keep the existing password
Enter a new password

Using your Vulkano remote:

1. Enter your key or passphrase
2. Press **OK**

**Note:** Press 🔴 and use the Arrow and **OK** buttons on your Vulkano remote to select characters from the on-screen keyboard, or press 🟡 to toggle between lower case [abc], caps [ABC], and numeric [123] entry modes.

A Network Configuration confirmation screen will be displayed.

- Press **OK**

**Note:** To refresh the list of available wireless network names: select **Refresh SSID List** and press **OK**

### *Manually input a wireless network name*

Using the Arrow buttons on your Vulkano remote:

1. Select **Enter another SSID**
2. Press **OK**

Using your Vulkano remote:

1. Enter a wireless network network name (SSID)
2. Press **OK**

**Note:** Press 🔴 and use the Arrow and **OK** buttons on your Vulkano remote to select characters from the on-screen keyboard, or press 🟡 to toggle between lower case [abc], caps [ABC], and numeric [123] entry modes.

Using the Arrow buttons on your Vulkano remote:

1. Select your Security type
   - **None**
   - **WEP**
   - **WPA**
2. Press **OK**

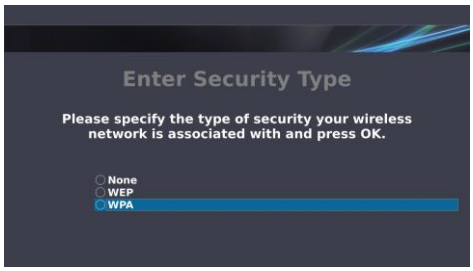
Enter Security Type
Please specify the type of security your wireless network is associated with and press OK.
None
WEP
WPA

Using your Vulkano remote:

1. Enter the key or passphrase
2. Select **Done**
3. Press **OK**

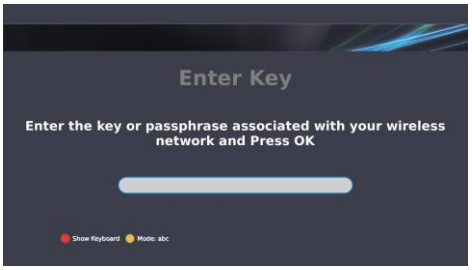


**Note:** Press 🔴 and use the Arrow and **OK** buttons on your Vulkano remote to select characters from the on-screen keyboard, or press 🟡 to toggle between lower case [abc], caps [ABC], and numeric [123] entry modes.

A Network Configuration confirmation screen will be displayed.

- Press **OK**

## VULKANO NAME

You can give your Vulkano a name and password. This name and password will allow you access to your Vulkano from your PC or mobile device.

Vulkano Name
This name is used when connecting to your Vulkano from a PC or smartphone. Please select the appropriate option and press OK.
0000j
Show Keyboard
Mode: abc

Using your Vulkano remote:

1. Enter your own Vulkano name
2. Press **OK**

**Note:** Press 🔴 and use the Arrow and **OK** buttons on your Vulkano remote to select characters from the on-screen keyboard, or press 🟡 to toggle between lower case [abc], caps [ABC], and numeric [123] entry modes.

## VULAKNO PASSWORD

Use the Arrow and **OK** buttons on your Vulkano remote:

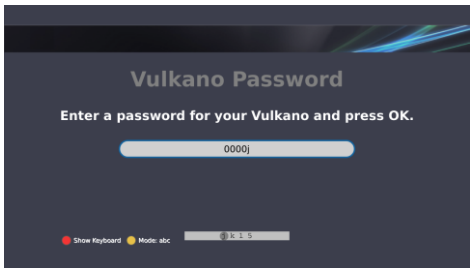


1. Enter your password
2. Press **OK**

**Note:** The Vulkano name and password are case sensitive. If you enter a name that has already been assigned to someone else, you will be asked to choose another name.

## CONFIGURE VIDEO INPUT

Using the Arrow buttons on your Vulkano remote:

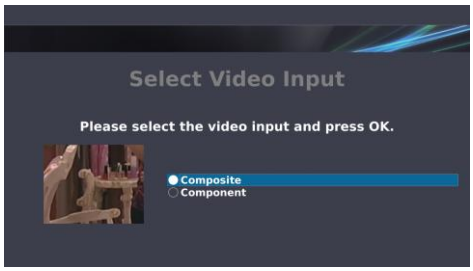


1. Select the appropriate video input configuration that corresponds to how you connected Vulkano to your STB:
   - **Composite –** if you used Red/White/ Yellow cables

   - **Component –** if you used Red/Green/ Blue and Red/White/Yellow cables

2. Press **OK**

When you have selected the correct video input configuration, the video will appear in the lower-left part of your TV screen.

**Note:** This step only appears if you have connected both Composite and Component cables. Otherwise the input is auto-detected.

## Guide Configuration

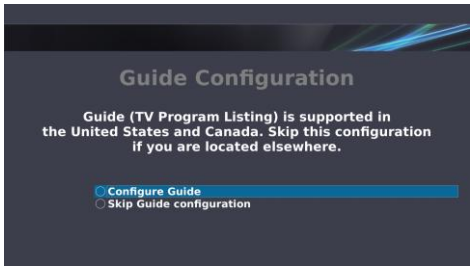
Guide Configuration
Guide (TV Program Listing) is supported in the United States and Canada. Skip this configuration if you are located elsewhere.
Configure Guide
Skip Guide configuration

Using the Arrow buttons on your Vulkano remote:

1. Select **Configure Guide**
2. Press **OK**

**Note:** The guide (TV program listing) is supported in the United States and Canada. If you are located in another country, select **Skip Guide configuration** and Press **OK**

## Select Location

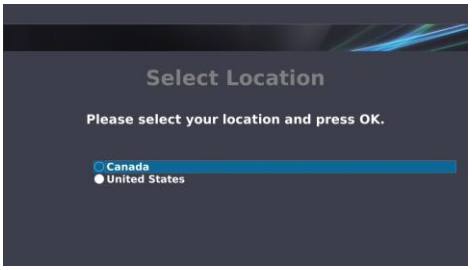


Using the Arrow buttons on your Vulkano remote:

1. Select your **Country**
2. Press **OK**

## Enter ZIP Or Postal Code

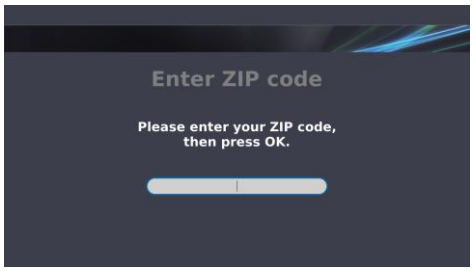


Using the Alpha Numeric buttons on your Vulkano remote:

1. Enter your zip code
2. Press **OK**

**Note:** You can use the Left Arrow button on your Vulkano remote to backspace if you make a mistake.

## Select TV Service

Using the Arrow buttons on your Vulkano remote:

1. Select **Cable, Over the Air (TV Tuner)** or **Satellite**
2. Press **OK**

## TV Service Provider

Using the Arrow buttons on your Vulkano remote:

1. Select your TV service provider from the list
2. Press **OK**

## DEVICE TYPE

Using the Arrow buttons on the Vulkano remote:

1. Select your **Device** Type:
   - Analog Device
   - Digital (non-rebuild)
2. Press **OK**

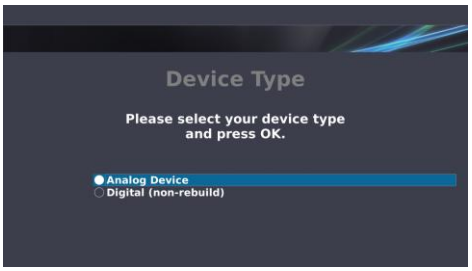


**Note:** The ***Analog Device*** option corresponds to SD cable. The ***Digital (non-rebuild)*** option corresponds to HD cable.

**Note:** The Device Type screen may not be displayed. If you cannot specify your device type in TV setup, please refer to the Configure Your TV From Your PC (Wireless) > Set Up EPG (Electronic Program Guide) on page 45.

## SELECT STB MODEL

Using the Arrow buttons on the Vulkano remote, select one of the following options:

- **Select by device category**
- **Select by manufacturer name**
- **Use code learned with PC Setup Wizard**

Select STB Model
Vulkano needs to know your STB (Set Top Box) Manufacturer and Model in order to control it.
Select by device category
Select by manufacturer name
Use code learned with PC Setup Wizard

For **Select by device category**, use the Arrow buttons on your Vulkano remote:

1. Select your STB type
2. Press **OK**

For **Select by manufacturer name**, use the Arrow buttons on your Vulkano remote:

1. Select your STB manufacturer
2. Press **OK**

Select STB Model
Select your STB manufacturer and press OK.
Use the number keys to select the first letter.
Example: 2 = A, B, C, 2. Then use the Up/Down arrow to choose the exact one.
Digital Stream
Digiturk
DirecTV
Dish Network System

**Note:** Use the number keys to select the first letter. For example, 2 = A, B, C, 2. Then use the Up/Down Arrows to choose the exact manufacturer name.

Using the Arrow buttons on your Vulkano remote:

1. Select the STB Model
2. Press **OK**

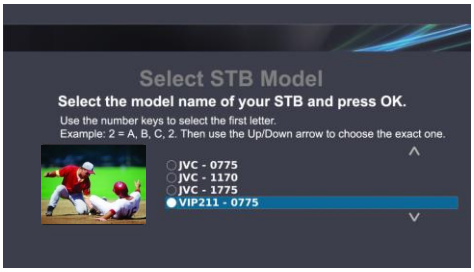
Select STB Model
Select the model name of your STB and press OK.
Use the number keys to select the first letter.
Example: 2 = A, B, C, 2. Then use the Up/Down arrow to choose the exact one.
JVC - 0775
JVC - 1170
JVC - 1775
VIP211 - 0775

**Note:** Use the number keys to select the first letter. For example, 2 = A, B, C, 2. Then use the Up/Down Arrows to choose the exact model name. If your device model is not listed, choose a similar model number if possible.

For **Use code learned with PC Setup Wizard**, it will be necessary to, first, setup your Vulkano to learn your remote control codes.

1. Select **Use code learned with PC Setup Wizard**
2. Press **OK**

For information about assigning control codes, please refer to the Learning Remote Control Commands (For PC) on page 46, or Learning Remote Control Commands (For Mac) section on page 54.

## STB TUNING TEST

To test the remote commands:

1. Press the **CH+** and **CH-** buttons
2. Press **OK**

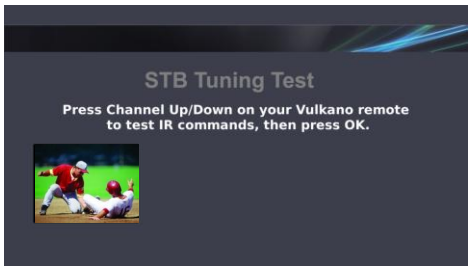


Using the Arrow buttons on your Vulkano remote:

- Select **It worked** if the remote commands work
- Select **It didn't work** if the remote commands failed, and follow the instructions
- Select **Try again** to test the remote commands again
- Select **Continue anyway** to skip the test and try again later
- Press **OK**

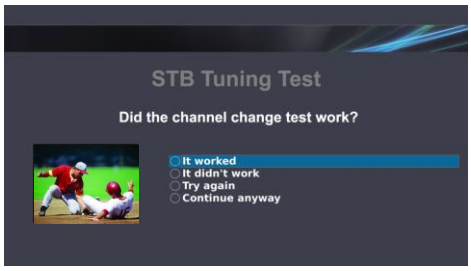


**Note:** If the STB tuning test still does not work, you may need to set up your ***IR Blaster*** cable. Please refer to the Setup The STB Control section on page 55.

## CONFIGURE TIME ZONE

Using the Arrow buttons on your Vulkano remote:

1. Select your time zone
2. Press **OK**

Configure Time Zone
Select the Time Zone and press OK.
(GMT-11:00) Midway Island, Samoa
(GMT-10:00) Alaska-Hawaii
(GMT-09:00) Yukon
(GMT-08:00) Pacific Time (US and Canada); Tijuana

## VULKANO CONFIGURED SUCCESSFULLY

Congratulations! You have successfully set up your Vulkano!

- Press **OK**

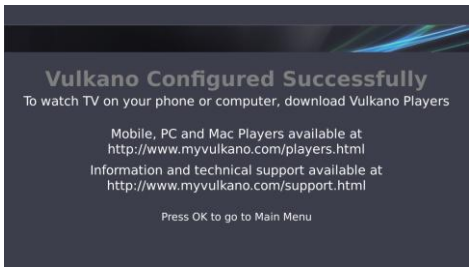
Vulkano Configured Successfully
To watch TV on your phone or computer, download Vulkano Players
Mobile, PC and Mac Players available at
http://www.myvulkano.com/players.html
Information and technical support available at
http://www.myvulkano.com/support.html
Press OK to go to Main Menu

**Note:** If you are unable to set up your Vulkano through your TV, please refer to Vulkano Setup For PC/Mac on page 36.

## ADDITIONAL HELP

For information about players for PCs, Macs, iPhone/iPads, Androids and Blackberrys, please refer to Download And Install Players on page 57.

For additional help, please refer to Frequently Asked Questions, Troubleshooting and Support on page 58.

# USING YOUR VULKANO

This section covers the following:

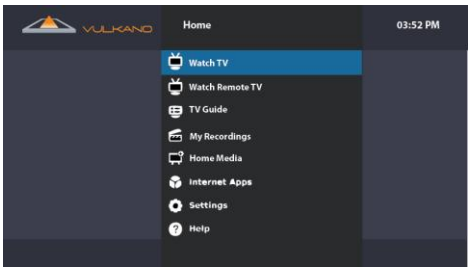



- Watch TV
- Watch Remote TV
- TV Guide
- My Recordings
- Home Media
- Internet Apps
- Settings
- Help


## WATCH TV

To watch Live TV, you can:

- Use the Arrow buttons on your Vulkano remote to select the **Watch TV** option from the Menu screen and press **OK**
  or
- Press **TV**

A television picture will be displayed on your screen.

- Press 🔵 to view your remote control options

**Note**: Some STB Cable and Satellite boxes require users to enter leading zeros in front of single-digit channels. For example: 7, 07, 007, 0007.

### *Record a program*

To record a program:

1. Press 🔴 to initiate a recording of the program you are currently viewing
2. Use the Left/Right Arrow buttons on your Vulkano remote to specify a longer or shorter recording time
3. Press **OK** or 🔴 to begin the recording

**Note:** Hold down the Right Arrow button to advance the recording time in fifteen minute increments.

### *Stop a recording*

To stop a recording:

1. Press 🔴 again
2. Use the Left/Right Arrow buttons on your Vulkano remote and select **Stop**
3. Press **OK**

**Note:** If you selected a TV channel from the Guide, you can press the **Back** button to return back to the Guide.

### *Schedule this recording*

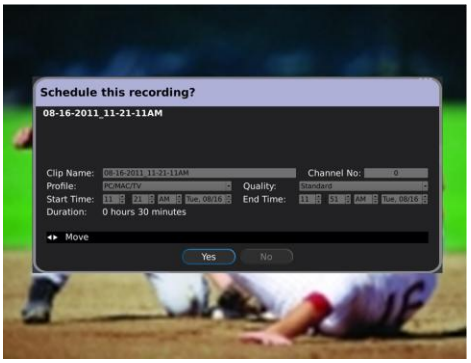


To schedule a recording:

- Press

In the Schedule this recording pop-up window, you can perform any of the following options:

- Use the left and right Arrow buttons on your Vulkano remote to navigate to the **Clip Name**, **Channel No**, **Profile**, **Quality**, **Start Time** and **End Time** setting options
- Use the alpha numeric key pad to edit the **Clip Name** and **Channel No**
- Use the up and down Arrow buttons on your Vulkano remote to adjust the **Profile**, **Quality**, **Start Time** and **End Time** settings options

Profile options are used to specify the type of video format for a recording. The higher resolution and quality formats provide a better video quality, but uses more disk space and takes longer to transfer to your tablet, smartphone or PC. Choose the best profile from the list.

Profile options include the following: **PC/Mac/TV**; **iPhone**, **iPod touch**; **iPad**; **Droid**, **Milestone**; **Cliq, Devour; General-high(640x480)**; **General-medium(480x320)**; **General-small(320x240)**; **Google Nexus;** and **BlackBerry**.

Quality options include the following: **Standard**, and **High (Large Size)**.

Using the Arrow buttons on your Vulkano remote:

- Select **Yes** to manually schedule a recording
- Select **No** to cancel the scheduling option

# WATCH REMOTE TV

The Watch Remote TV function lets you stream video from another Vulkano.

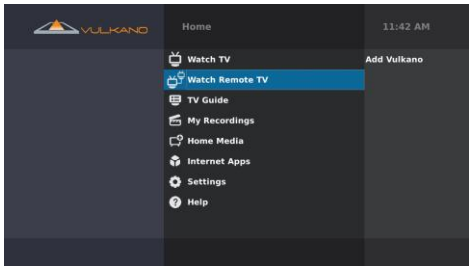


To access the Watch Remote TV option, you can:

1. Use the Arrow buttons on your Vulkano remote to select the **Watch Remote TV** option from the Menu screen
2. Press **OK**

### *Add a remote Vulkano*

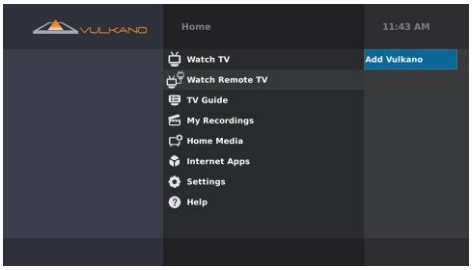


To add a remote Vulkano to your list:

1. Select **Add Vulkano**
2. Enter the **Name** and **Password** of the remote Vulkano
3. Select **Set as selected** if you wish to set this remote Vulkano as your default
4. Select **OK**

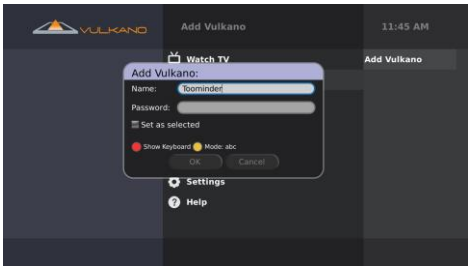


The first remote Vulkano added to your list will automatically be selected as the default selection and will be displayed in the Watch Remote TV sub-menu section.

**Note:** Press 🔴 and use the Arrow and **OK** buttons on your Vulkano remote to select characters from the on-screen keyboard, or press 🟡 to toggle between lower case [abc], caps [ABC], and numeric [123] entry modes.

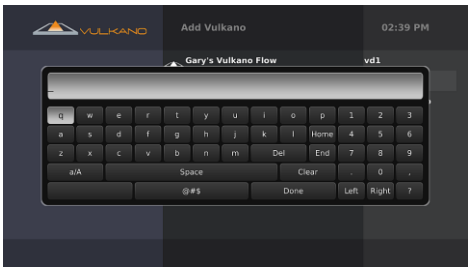

### *Watch a remote Vulkano*

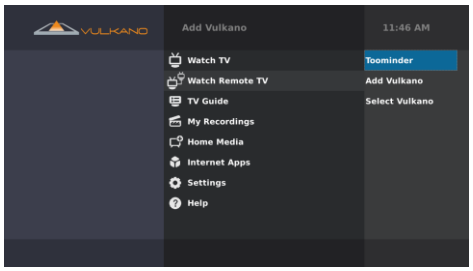


To watch remote TV:

1. Select **Select Vulkano**
2. Select the name of your remote Vulkano
3. Press **OK**
4. Select **Connect** from the pop-up menu
5. Press **OK**

A television picture will be displayed on your screen.

- Press 🔵 to view your remote control options

### *Edit a remote Vulkano*

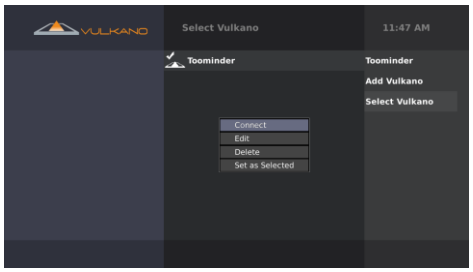


To edit the name and password of an added remote Vulkano:

1. Select the name of your remote Vulkano
2. Press **OK**
3. Select **Edit** from the pop-up menu
4. Use the Arrow buttons on your Vulkano remote to edit the **Name** and **Password**
5. Press **OK**
6. Select **Set as selected** if you wish to set this remote Vulkano as your default
7. Select **OK**

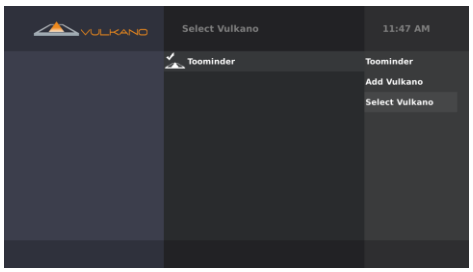


All listed remote Vulkanos will be displayed in the Select Vulkano menu.

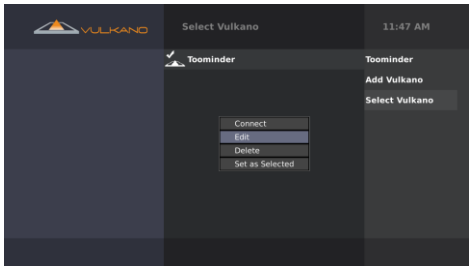


### *Set a remote Vulkano as the default*

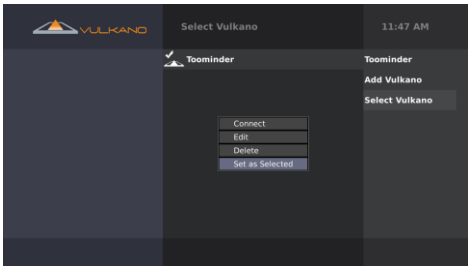


To set a remote Vulkano as the default within your list:

1. Select a listed remote Vulkano
2. Press **OK**
3. Select **Set as Selected** from the pop-up menu

The selected default will display a checkmark icon in the Select Vulkano menu.

### *Delete a remote Vulkano*

To delete a remote Vulkano from your list:

1. Use the Arrow buttons on your Vulkano remote to select a remote Vulkano
2. Press **OK**
3. Select **Delete** from the pop-up menu
4. Select **OK** in the Confirmation pop-up window

The deleted remote **Vulkano** will be removed from the Select Vulkano menu.

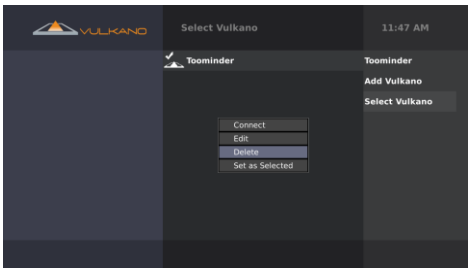


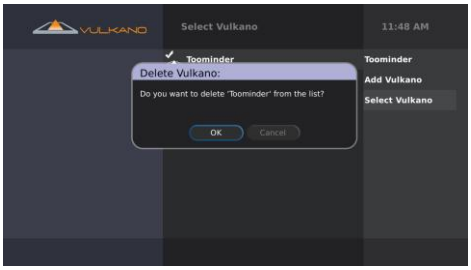

# TV GUIDE

To access the TV Guide, you can:

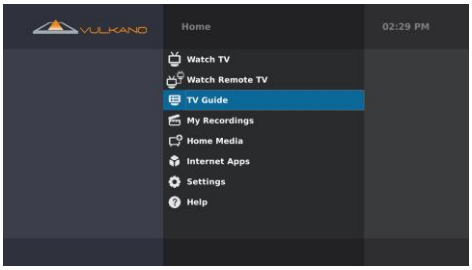


- Use the Arrow buttons on your Vulkano remote to select the **Guide** option from the Menu screen and press **OK**
  or
- Press **Guide**

Using the Arrow buttons on your Vulkano remote, you can select a specific program and:

- Press 🔴 to schedule or stop a recording
- Press 🟡 to delete a recording
- Press 🔵 add a channel to your favorites list, show favorites only, or return to the Guide
- Press 🟢 to view information about a specific program
- Press **OK** to tune to a channel
- Press **CH+** to page up the program list
- Press **CH-** to page down the program list
- Press **PREV** or ⏮ to view the program list from the previous day
- Press **NEXT** or ⏭ to view the program list for the next day
- Press **Back** to return to the Menu

### *Schedule a recording*

To schedule a recording from the Guide:

1. Use the Arrow buttons on your Vulkano remote to select the program
2. Press 🔴

An information dialog box will be displayed.

From the Information dialog box, you can perform one of the following options:

- Select **Modify** to manually specify clip name, profile format, quality of the recording, start time and end time
- Select **Yes** to manually schedule a recording
- Select **No** to cancel the scheduling option

### *Modify settings*

In the Modify Settings dialog box, you can perform any of the following options:

- Use the left and right Arrow buttons on your Vulkano remote to navigate to the **Clip Name**, **Profile**, **Quality**, **Start Time** and **End Time** setting options
- Use the alpha numeric key pad to edit the **Clip Name**
- Use the up and down Arrow buttons on your Vulkano remote to adjust the **Profile**, **Quality**, **Start Time** and **End Time** settings options

Profile options are used to specify the type of video format for a recording. The higher resolution and quality formats provide a better video quality, but uses more disk space and takes longer to transfer to your tablet, smartphone or PC. Choose the best profile from the list.

Profile options include the following: **PC/Mac/TV**; **iPhone**, **iPod touch**; **iPad**; **Droid**, **Milestone**; **Cliq, Devour; General-high(640x480)**; **General-medium(480x320)**; **General-small(320x240)**; **Google Nexus;** and **BlackBerry**.

Quality options include the following: **Standard** and **High (Large Size)**.

Using the Arrow buttons on your Vulkano remote:

- Select **Save** to make the **Profile** and **Quality** settings the default settings for future recordings. This will return you to the previous screen
- Select **Yes** to manually schedule a recording
- Select **No** to cancel the scheduling option

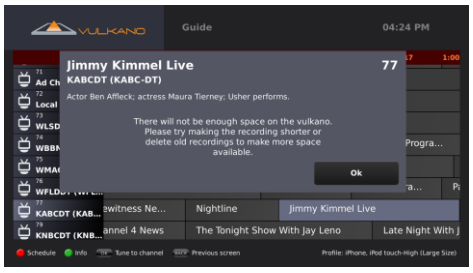


If the amount of space required for a recording exceeds your available space, an information dialog box will be displayed.

- Press **OK**

**Note:** If you wish to free up available space, you can delete existing or scheduled recordings from the storage. For additional information, please refer to the My Recordings section on page 25.

### *Stop a recording*

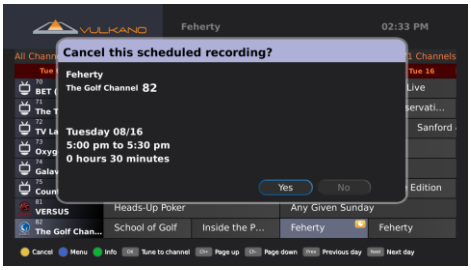


To stop a recording in progress:

1. Use the Arrow buttons on your Vulkano remote to select the program
2. Press 🔴 to stop the recording
3. Select **Yes**

A confirmation dialog box will be displayed.

4. Press **OK**

### *Delete a recording*

To delete a recording:

1. Use the Arrow buttons on your Vulkano remote to select the previously recorded program from the Guide
2. Press 🟡
3. Select **Delete Recording(s)**

A confirmation dialog box will be displayed.

4. Press **OK**

### *Search for a program / add to favorites*

To search for a program from the Guide:

1. Press 🔵 and select **Search** or Press **Search** on your Vulkano remote
2. Use the alpha numeric key pad to enter a **Keyword**
3. Use the Arrow buttons to select **Search** and specify either **Programs** or **Channels**
4. For programs, use the Arrows and **OK** buttons to specify the keyword search to include a **Title** and/or **Description**
5. Select **Exact Phrase** (Optional)
6. Press **OK**

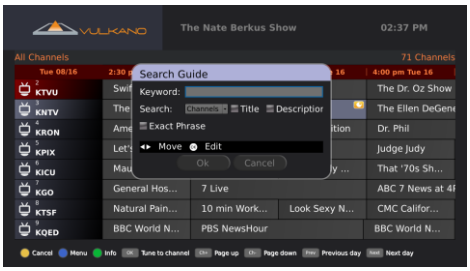

The search results will be displayed. You can perform any of the following options:

1. Press 🔴 to schedule or stop a recording
2. Press 🔵 to add a channel to your favorites list, show favorites only, or return to the Guide
3. Press 🟢 to view information about a program
4. Press **CH+** to page up the search results
5. Press **CH-** to page down the search results

To add a channel to your favorites list:

1. Use the Arrow buttons on your Vulkano remote to select a program
2. Press 🔵
3. Select **Add to favorites**

Channels that have been added to your favorites list will display a ❤ in the channel listing.

To remove a channel from your favorites list:

1. Use the Arrow buttons on your Vulkano remote to select the favorites channel
2. Press 🔵
3. Select **Remove from favorites**

The ❤ icon will be removed from the TV Guide listing.

***Show favorites only***

To view your favorites list:

1. Press 🔵
2. Select **favorites**

All programs that have been added to the favorites list will be displayed.

***View program information***

To view specific information about a program:

1. Use the Arrow buttons on your Vulkano remote to select the scheduled program
2. Press 🟢

Information will be displayed at the bottom of the screen.

### *Recording a show from the Guide – Indicator icons*

When viewing the Guide:

- The **Red Circle Indicator** is displayed for recordings that are currently in progress
- The **Orange Circle Indicator** is displayed for scheduled recordings
- The **Green Circle Indicator** is displayed for recordings that have been completed.

# MY RECORDINGS

To access My Recordings, you can:

- Use the Arrow buttons on your Vulkano remote to select the **My Recordings** option from the Menu screen and press **OK**
  or
- Press **DVR**

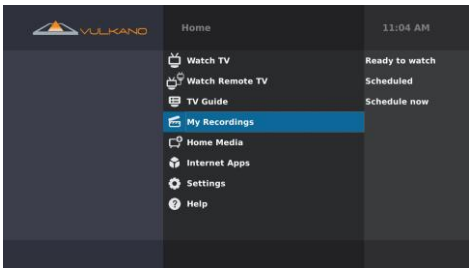


## *Ready to watch*

Using the Arrow buttons on your Vulkano remote:

1. Select **Ready to watch** to view recordings that have been completed
2. Press **OK**

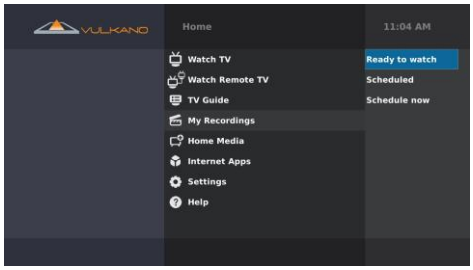


The Ready to watch screen displays a list of programs that have already been recorded.

The name of the program, program description, record profile and file size will be displayed on the left side of the screen.

1. Press 🟡 to delete the selected recording
2. Press 🔵 to refresh the list
3. Press ⏯ or **OK** to view the selected recording
4. Press **CH+** to page up the Ready to watch list
5. Press **CH-** to page down the Ready to watch list
6. Press **Back** to return to the previous screen

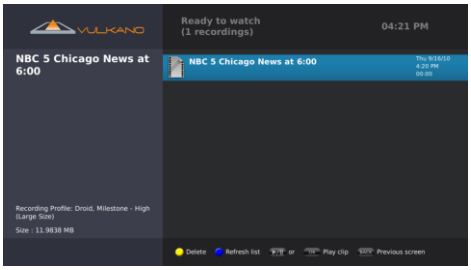


To view a program, you can:

1. Use the Arrow buttons on your Vulkano remote to select a recorded program
2. Press **OK**

A recorded program will be displayed on your screen.

- Press 🔵 to view your remote control options

Recorded programs can be viewed in your PC, Mac or Mobile device Ready to Transfer list, if they have been recorded in the correct format for that device.

When viewing a recording, you have the following options:

- Press ⊡ and select **Resume playback**
- Press ⊡ and select **Start from beginning**
- Press ⊡ and select **Erase this recording**
- Press ⊡ and select **Watch TV**
- Press ⊡ and select **Recording (Ready to Watch)**

***Scheduled***

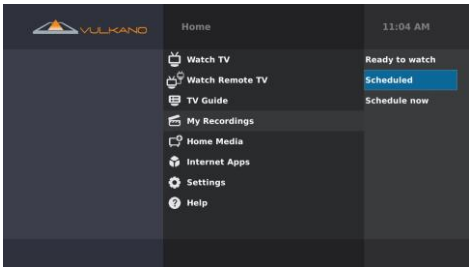


Using the Arrow buttons on your Vulkano remote:

1. Select **Scheduled** to view programs that are scheduled for recording
2. Press **OK**

The Scheduled screen displays a list of programs that are currently being recorded and are scheduled to be recorded.

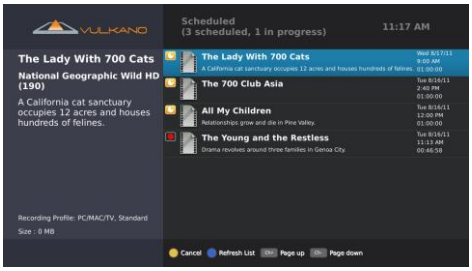


Use the Arrow buttons on your Vulkano remote to select a scheduled program:

- Press 🔴 to stop a recording in progress and keep that part which has already been recorded
- Press 🟡 to cancel a scheduled recording that is not yet in progress
- Press 🔵 to refresh the list
- Press **CH+** to page up
- Press **CH-** to page down
- Press **Back** to return to the previous screen

### *Schedule Now*

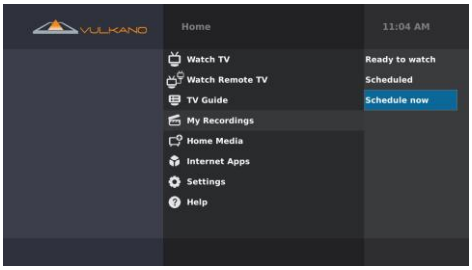


Using the Arrow buttons on your Vulkano remote:

1. Select **Schedule now** to record a program that is currently in progress
2. Press **OK**

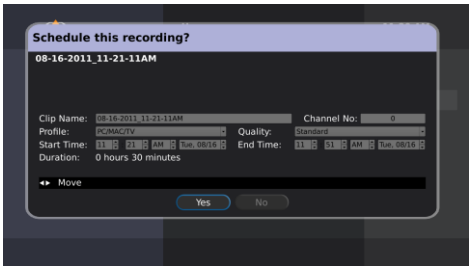


In the Schedule this recording pop-up window, you can perform any of the following options:

- Use the left and right Arrow buttons on your Vulkano remote to navigate to the **Clip Name**, **Channel No**, **Profile**, **Quality**, **Start Time** and **End Time** setting options
- Use the alpha numeric key pad to edit the **Clip Name** and **Channel No**
- Use the up and down Arrow buttons on your Vulkano remote to adjust the **Profile**, **Quality**, **Start Time** and **End Time** settings options

Profile options are used to specify the type of video format for a recording. The higher resolution and quality formats provide a better video quality, but uses more disk space and takes longer to transfer to your tablet, smartphone or PC. Choose the best profile from the list.

Profile options include the following: **PC/Mac/TV**; **iPhone**, **iPod touch**; **iPad**; **Droid**, **Milestone**; **Cliq, Devour; General-high(640x480)**; **General-medium(480x320)**; **General-small(320x240)**; **Google Nexus;** and **BlackBerry**.

Quality options include the following: **Standard**, and **High (Large Size)**.

Using the Arrow buttons on your Vulkano remote:

- Select **Yes** to manually schedule a recording
- Select **No** to cancel the scheduling option

# HOME MEDIA

Home Media provides a Universal Plug and Play (UPnP) option that enables your Vulkano to access videos, photos and music files from external PCs, Macs, Tablets and smartphones. To access video, photo and music files from an external device, that device must be enabled with a UPnP AV server application.

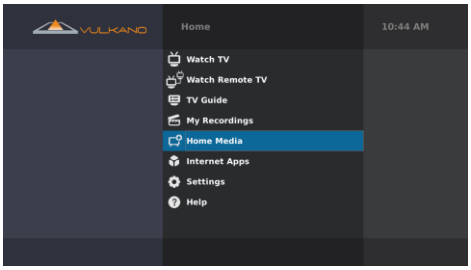


To access Home Media, you can:

- Use the Arrow buttons on your Vulkano remote to select the **Home Media** option and press **OK** or
- Press **Media**

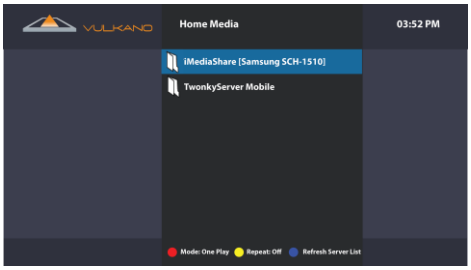


All external devices with a UPnP AV server application will be displayed.

**Note:** The Monsoon Vulkano player provides the UPnP server feature for iPhone and iPad.

### *Access media files on shared devices*

To view media files from a specific external device:

1. Use the Arrow buttons on your Vulkano remote to select the device
2. Press **Ok**

**Note:** It will be necessary to synch your device into the same network.

### *Access media files on a USB device*

To view media files on a USB device:

1. Plug the device into the USB port
2. Use the Arrow buttons on your Vulkano remote to select the USB device
3. Press **OK**

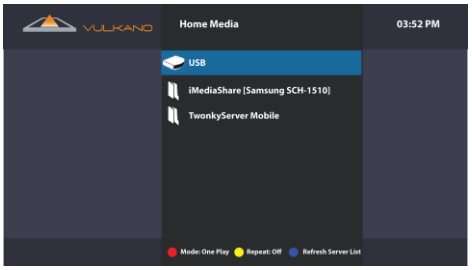

### *Set viewing parameters*

You can set viewing parameters to any of the following options:

- Press 🔴 to select the appropriate playback convention:
  - **Mode: Play One** – this convention plays back the selected media file.
  - **Mode: Play List** – this convention plays back all media files from the list.
  - **Mode: Play Shuffle** – this convention plays back all media files from the list in random order.
- Press 🟡 to select the appropriate playback convention:
  - **Repeat: On** – this convention plays back the selected media file only one time.
  - **Repeat: Off** – this convention plays back the selected media file multiple times.
- Press 🔵 to refresh the list of available media

### *Help options*

When viewing Home Media files:

- Press 🔵 to view your remote control options

# INTERNET APPS

To access Internet Apps, you can:

- Use the Arrow buttons on your Vulkano remote to select the **Internet Apps** option and press **OK**

  or
- Press **Apps**

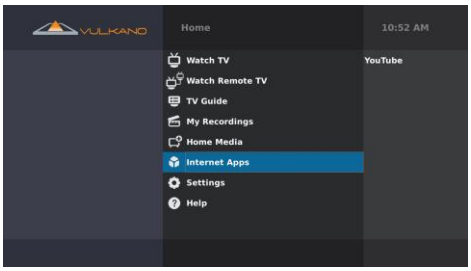


### *Access YouTube*

To access the YouTube feature, you can:

1. Use the Arrow buttons on your Vulkano remote to select **YouTube**
2. Press **OK**

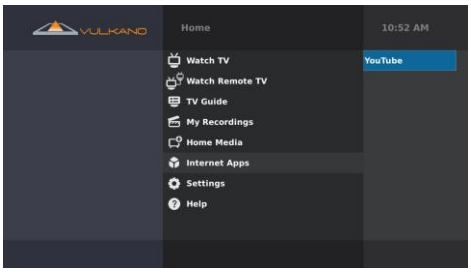


The Internet Apps > YouTube feature contains the following options that can be accessed using the Arrow buttons on your Vulkano remote:

- Recently Featured
- Top Rated
- Most Viewed
- Top Favorites
- Search
- Settings

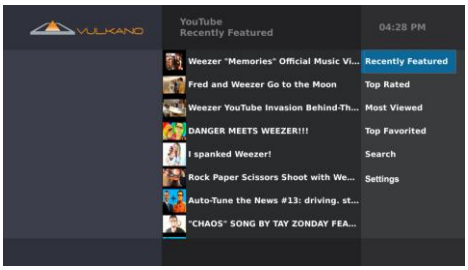


When viewing the Recently Featured, Top Rated, Most Viewed or Top Favorited options:

- Press 🔵 to view your remote control options

### *Search for video clips on YouTube*

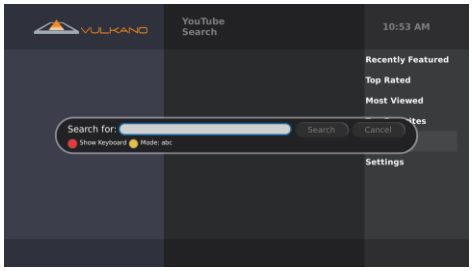


To search for a specific YouTube video clip:

1. Use the Arrow and **OK** buttons on your Vulkano remote to select the **Search** option
2. Press 🔴 to select the onscreen keyboard option, or press 🟡 to select the alpha numeric option on your Vulkano remote
3. Enter your search terms
4. Select **Done** when finished, for the onscreen keyboard option, or use the left/right Arrows on your Vulkano remote to select **Search**
5. Press **OK**

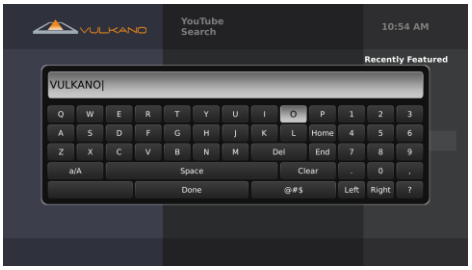


YouTube videos that fit your search parameters will be displayed.

### *Adjust resolution settings on YouTube*

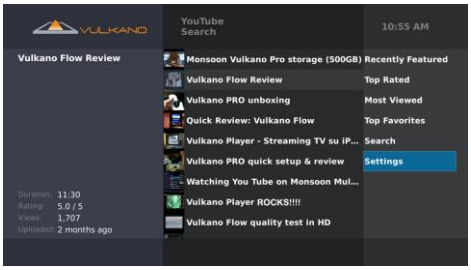


To specify the resolution quality of YouTube video clips:

1. Use the Arrow buttons on your Vulkano remote to select the YouTube **Settings** option
2. Press **OK**
3. Use the Arrow buttons on your Vulkano remote to select the resolution quality option
4. Press **OK**

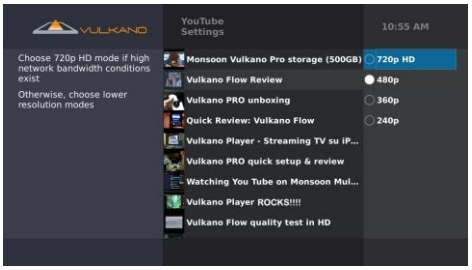


**Note:** Choose the 720p HD option if high network bandwidth conditions exist. Choose a lower setting if your YouTube videos pause frequently.

# SETTINGS

To view and adjust your settings, you can:

1. Use the Arrow buttons on your Vulkano remote to select the **Settings** option from the Menu screen
2. Press **OK**

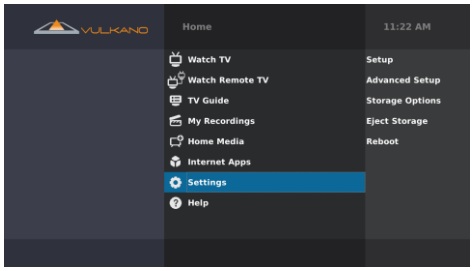


The Settings menu contains the following options:

- Setup
- Advanced Setup
- Storage Options
- Eject Storage
- Reboot

The **Setup** option allows you to configure your Vulkano.

The **Advanced Setup** option allows you to choose specific settings to edit in the following categories:

- Network
- Video Input
- STB Model
- Video Output
- TV Guide
- Vulkano Name and Password
- Time Zone
- Remote Access
- Storage
- Firmware Update

**Storage Options** allows you to specify the primary storage you want to associate with your Vulkano. Primary storage is used for recording and other media related functions.

Use **Eject Storage** before disconnecting a USB device from your Vulkano, to help avoid data corruption.

The **Reboot** option allows you to restart your Vulkano.

### *Setup*

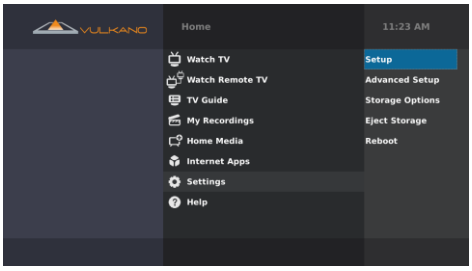


To access the Setup Wizard, you can:

1. Use the Arrow buttons on your Vulkano remote to select the **Setup** option
2. Press **OK**

**Troubleshooting**

For additional information or technical assistance for your Vulkano product, go to Monsoon's Technical Support Website at: http://www.myvulkano.com/support.html.

### *Advanced Setup*

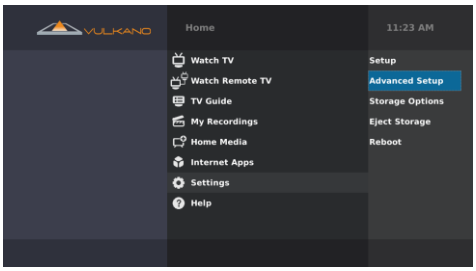


To access the Advanced Setup, you can:

1. Use the Arrow buttons on your Vulkano remote to select the **Advanced Setup** option
2. Press **OK**

The **Advanced Setup** option allows you to choose specific settings to edit in the following categories:

- Network
- Video Input
- STB Model
- Video Output
- TV Guide
- Vulkano Name and Password
- Time Zone
- Remote Access
- Storage
- Firmware Update

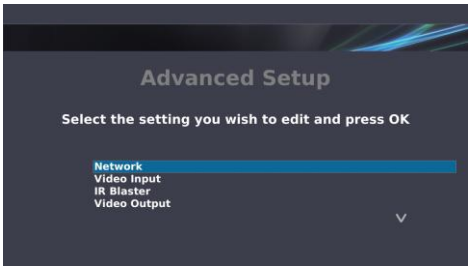


To go back to the main menu from the Advanced Setup screen, use the Arrow buttons on your Vulkano remote to:

1. Select **Main Menu**
2. Press **OK**
   or
   Press **Menu**

### *Storage Options*

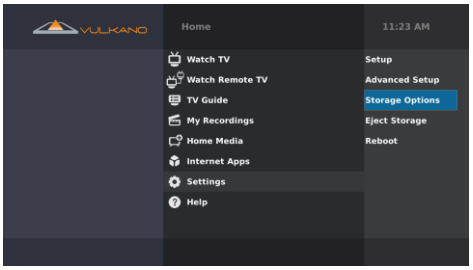


To specify the primary storage you wish to associate with your Vulkano:

1. Select **Storage Options**
2. Select the primary storage option and press **OK**

### *Eject Storage*

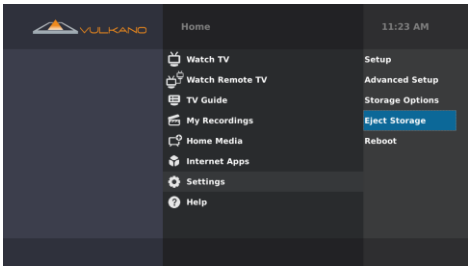


To disconnect a USB storage device from your Vulkano:

1. Select **Eject Storage**
2. Press **OK**
3. Disconnect your USB storage device

### *Reboot*

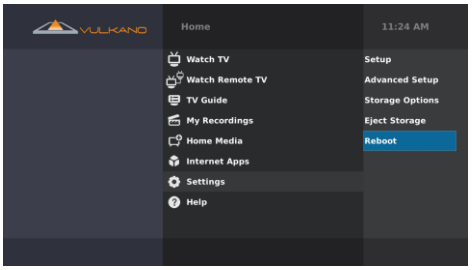


The **Reboot** option allows you to restart Vulkano.
To reboot your device:

1. Use the Arrow buttons on your Vulkano remote to select the **Reboot** option
2. Press **OK**

Vulkano will restart and return you to the Menu screen.

# HELP

To access the Help screen:

1. Use the Arrow buttons on your Vulkano remote to select the **Help > Vulkano TV Help** option
2. Press **OK**

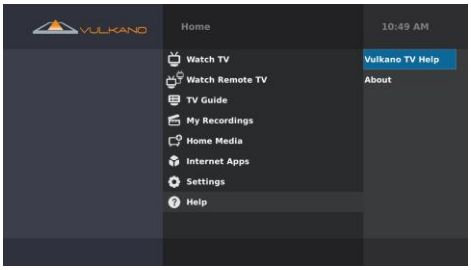


The Help screen provides tips and tricks for getting the most out of your Vulkano.

1. Use the Arrow buttons on your Vulkano remote to select a Help topic
2. Press **OK**

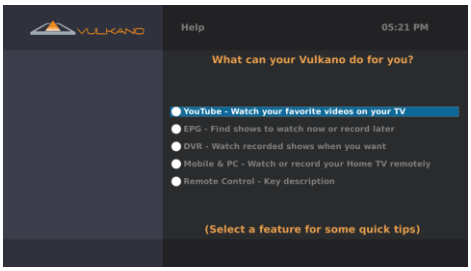
Help
05:21 PM
What can your Vulkano do for you?
YouTube - Watch your favorite videos on your TV
EPG - Find shows to watch now or record later
DVR - Watch recorded shows when you want
Mobile & PC - Watch or record your Home TV remotely
Remote Control - Key description
(Select a feature for some quick tips)

Topic tips and tricks will be displayed.

- Press the Arrow buttons to navigate to the next or previous pages
- Press Back to return to the Menu screen

To access the About screen:

1. Use the Arrow buttons on your Vulkano remote to select the **Help > About** option
2. Press **OK**

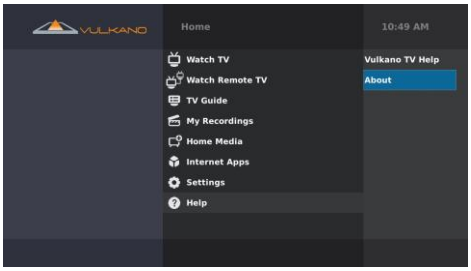


The About screen displays the current firmware version number and copyright information.

# VULKANO SETUP FOR PC/MAC

To set up your Vulkano through your computer, please refer to the following options:

- Vulkano Setup For Windows 7 And Vista
- Vulkano Setup For Windows XP
- Vulkano Setup for Mac

# VULKANO SETUP FOR WINDOWS 7 AND VISTA

These steps are for setting up your Vulkano for Windows 7 or Vista. If you are using Windows XP, please refer to the Vulkano Setup For XP section on page 40. If you are using a Mac, please refer to the Vulkano Setup For Mac section on page 48.

## CONNECT VULKANO TO YOUR STB

Your STB has output connectors on the back for Component setup, Composite setup or both. If you have both, use the Component setup for better video quality. You will need a STB to use Vulkano.

Connect the cables from your STB *output* connectors to your Vulkano's *input* connectors as shown below. For the Component setup option, you will use two sets of cables. For the Composite option, you will only use one set.

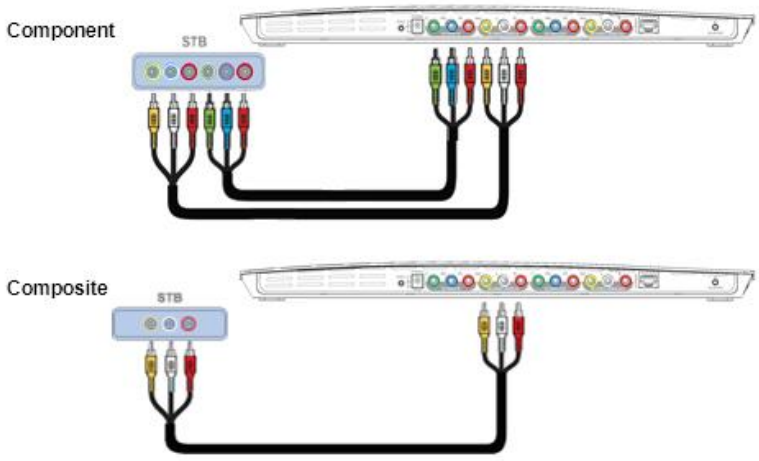


**Suggestion:** Be sure to write down your STB brand and model number. You will need it later in the setup process.

## CONNECT VULKANO TO YOUR TV

This step assumes that your STB was previously connected to your TV. You will re-use your existing cables. For the setup process, it is not mandatory to connect your Vulkano output to a TV. Your TV has audio and video input connectors for Component setup, Composite setup or both. Make sure you use the same cable types, either Component or Composite, for this connection as used in the previous section.

Connect the cables from your Vulkano *output* connectors to your TV's *input* connectors, as shown below. For the Component setup option, you will use two sets of cables. For the Composite option, you will only use one set.

If your TV has an HDMI input connector, use the HDMI setup option for better audio and video quality.

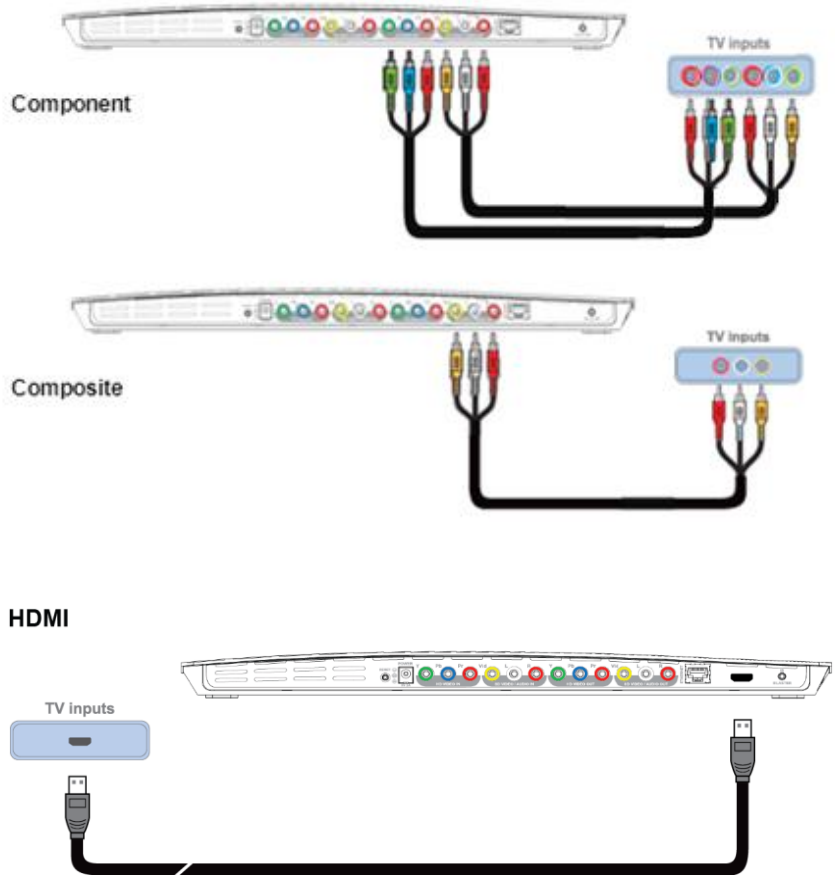

## CONNECT VULKANO TO THE NETWORK

You can use either a ***wired connection*** or ***Wi-Fi connection*** to connect your Vulkano to your home network.

### *Wired connection*

If your router is close to your Vulkano:

- Connect your Vulkano to your router using the supplied Ethernet cable

**Note:** You can connect your Vulkano to your router, your PC or an open Ethernet connection on your network.

### *Wi-Fi connection*

If you are connecting your Vulkano to your home network through a Wi-Fi connection, then your PC setup wizard will connect wirelessly to your home network.

## CONNECT VULKANO TO THE POWER ADAPTOR

Plug the power adapter into your Vulkano and a wall plug or power strip.

## INSTALL AND RUN THE VULKANO SETUP WIZARD

The Vulkano setup wizard is installed when you run the Vulkano PC Player program.

1. Go to: www.myvulkano.com/players.html
2. Click Download now for the PC Player
3. Launch the downloaded Vulkano setup file
4. Click **Save** in the dialog box

5. Click **Run** in the Download Complete dialog box.

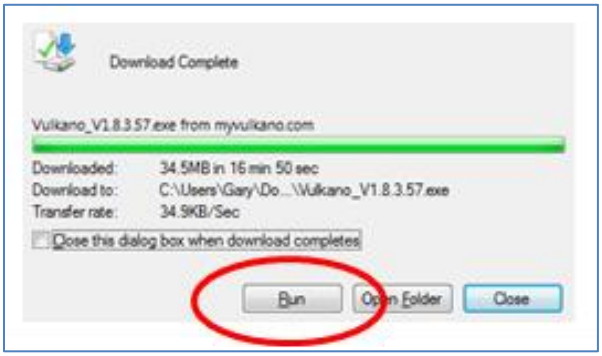


6. Select **Run Vulkano Setup Wizard**
7. Click **Finish**

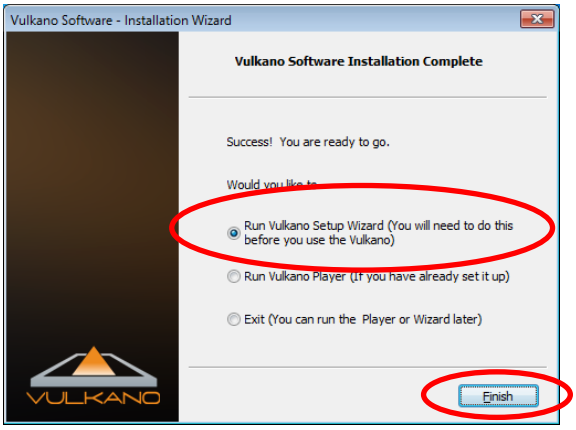
Vulkano Software - Installation Wizard
Vulkano Software Installation Complete
Success! You are ready to go.
Would you like to
Run Vulkano Setup Wizard (You will need to do this before you use the Vulkano)
Run Vulkano Player (If you have already set it up)
Exit (You can run the Player or Wizard later)
VULKANO
Finish

8. Follow through the remaining steps in the setup wizard, or refer to the Vulkano Setup For PC (Continued) > Set Up Wireless Settings section on page 44.

# VULKANO SETUP FOR WINDOWS XP

These steps are for setting up your Vulkano for Windows XP. If you are using Windows 7 or Vista, please refer to the Vulkano Setup For Windows 7 And Vista section on page 36. If you are using a Mac, please refer to the Vulkano Setup for Mac section on page 48.

## CONNECT VULKANO TO THE NETWORK

You can use either a ***wired connection*** or ***Wi-Fi connection*** to connect your Vulkano to your home network.

### *Wired connection*

If your router is close to your Vulkano:

- Connect your Vulkano to your router using the supplied Ethernet cable

**Note:** You can connect your Vulkano to your router, your PC or an open Ethernet connection on your network.

### *Wi-Fi connection*

If you are connecting your Vulkano to your home network through a Wi-Fi connection, then your PC setup wizard will connect wirelessly to your home network.

## CONNECT VULKANO TO THE POWER ADAPTOR

Plug the power adapter into your Vulkano and a wall plug or power strip.

## INSTALL AND RUN THE VULKANO SETUP WIZARD

The Vulkano setup wizard is installed when you run the Vulkano PC Player program.

1. Go to: [www.myvulkano.com/players.html](www.myvulkano.com/players.html)
2. Click Download now for the PC Player
3. Launch the downloaded Vulkano setup file
4. Click **Save** in the dialog box

5. Click **Run** in the Download Complete dialog box.

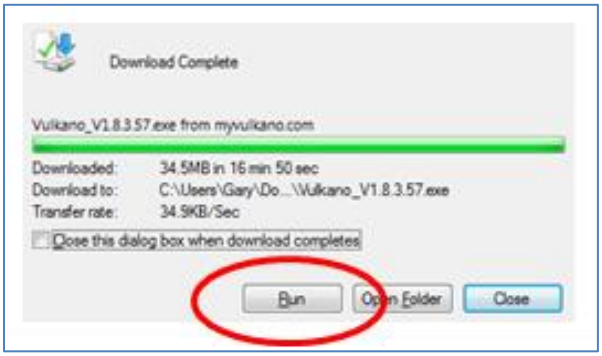


6. Select **Run Vulkano Setup Wizard**
7. Click **Finish**

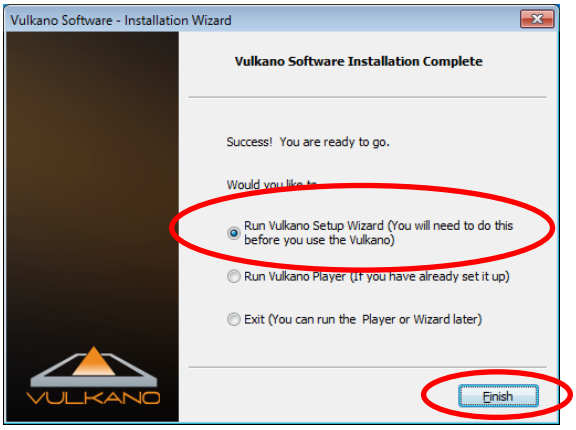
Vulkano Software - Installation Wizard
Vulkano Software Installation Complete
Success! You are ready to go.
Would you like to
Run Vulkano Setup Wizard (You will need to do this before you use the Vulkano)
Run Vulkano Player (If you have already set it up)
Exit (You can run the Player or Wizard later)
VULKANO
Finish

## CONNECT TO STB

Once your Vulkano has been connected to your wireless network, it will no longer be necessary to have your Vulkano connected directly to your router.

1. Disconnect the Ethernet cable from your Vulkano
2. If necessary, unplug the power supply from your Vulkano and reconnect the audio and video cables from your STB to your Vulkano
3. Reconnect the power supply
4. Click **Next**

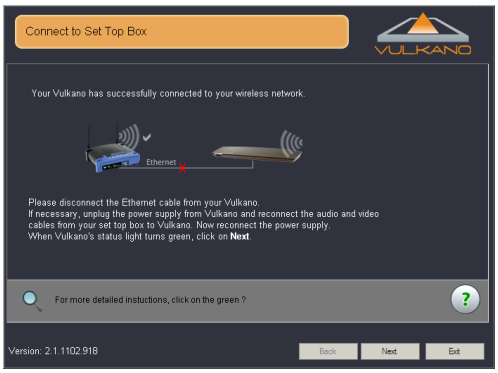
Connect to Set Top Box
VULKANO
Your Vulkano has successfully connected to your wireless network.
Ethernet
Please disconnect the Ethernet cable from your Vulkano.
If necessary, unplug the power supply from Vulkano and reconnect the audio and video cables from your set top box to Vulkano. Now reconnect the power supply.
When Vulkano's status light turns green, click on Next.
For more detailed instuctions, click on the green ?
Version: 2.1.1102.918
Back
Next
Exit

**Note:** If your PC Player does not connect wirelessly to your Vulkano, connect your PC to your router with an Ethernet cable and click **Retry**.

## CONNECT VULKANO TO YOUR STB

Your STB has output connectors on the back for Component setup, Composite setup or both. If you have both, use the Component setup for better video quality. You will need a STB to use your Vulkano.

Connect the cables from your STB *output* connectors to your Vulkano's *input* connectors as shown below. For the Component setup option, you will use two sets of cables. For the Composite option, you will only use one set.

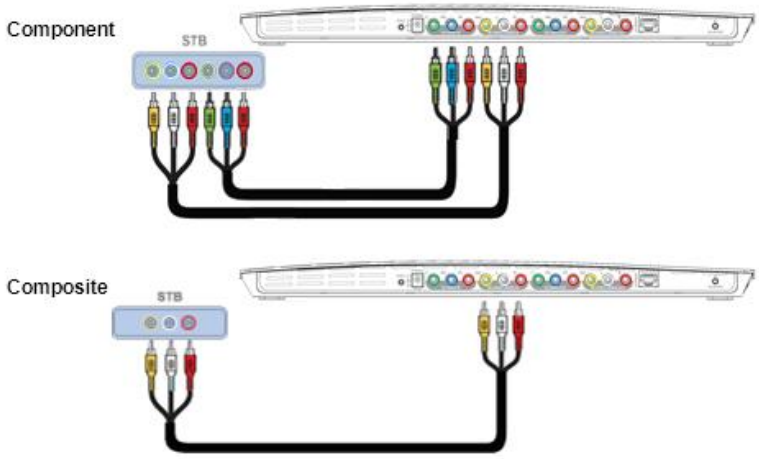


**Suggestion:** Be sure to write down your STB brand and model number. You will need it later in the setup process.

## CONNECT VULKANO TO YOUR TV

This step assumes that your STB was previously connected to your TV. You will re-use your existing cables. For the setup process, it is not mandatory to connect your Vulkano output to a TV. Your TV has audio and video input connectors for Component setup, Composite setup or both. Make sure you use the same cable types, either Component or Composite, for this connection as used in the previous section.

Connect the cables from your Vulkano *output* connectors to your TV's *input* connectors, as shown below. For the Component setup option, you will use two sets of cables. For the Composite option, you will only use one set.

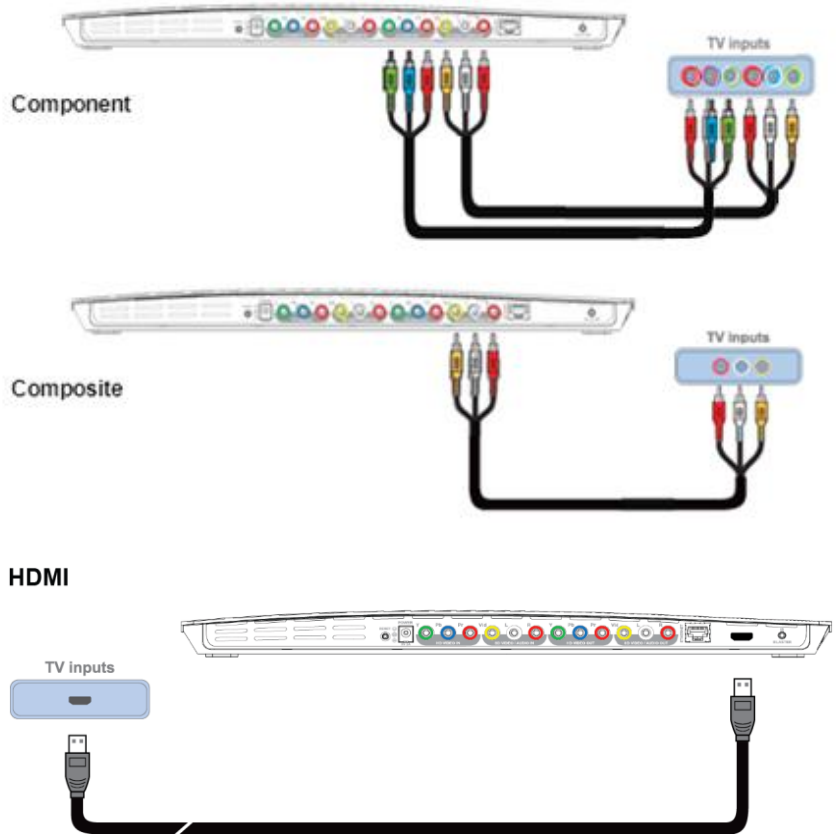


If your TV has an HDMI input connector, use the HDMI setup option for better audio and video quality.

Follow through the remaining steps in the setup wizard, or refer to the Vulkano Setup For PC (Continued)/Select Video Input section on page 45.

# VULKANO SETUP FOR PC (CONTINUED)

This section describes how to continue the setup process using your PC.

## SET UP WIRELESS SETTINGS

In the Set Up Wireless Settings window:

1. Select your **Home Network** from the drop-down list, or
   Enter your **network name**
2. Select your **Security Type**:
   - **None**
   - **WEP**
   - **WPA**
3. Enter the appropriate **Network key or passphrase**
4. Click **Next**

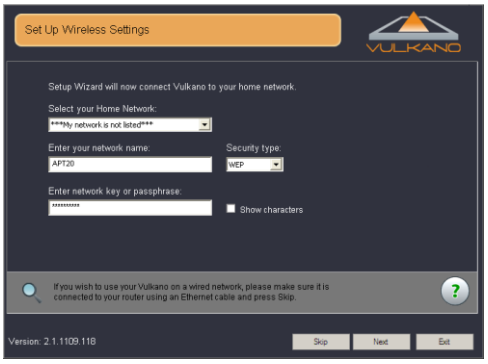
Set Up Wireless Settings
VULKANO
Setup Wizard will now connect Vulkano to your home network.
Select your Home Network:
***My network is not listed***
Enter your network name:
APT20
Security type:
WEP
Enter network key or passphrase:
Show characters
If you wish to use your Vulkano on a wired network, please make sure it is connected to your router using an Ethernet cable and press Skip.
Version: 2.1.1109.118
Skip
Next
Exit

## CONNECT TO STB

Once your Vulkano has been connected to your wireless network, it will no longer be necessary to have your Vulkano connected directly to your router.

1. Disconnect the Ethernet cable from your Vulkano
2. If necessary, unplug the power supply from your Vulkano and reconnect the audio and video cables from your STB to your Vulkano
3. Reconnect the power supply
4. Click **Next**

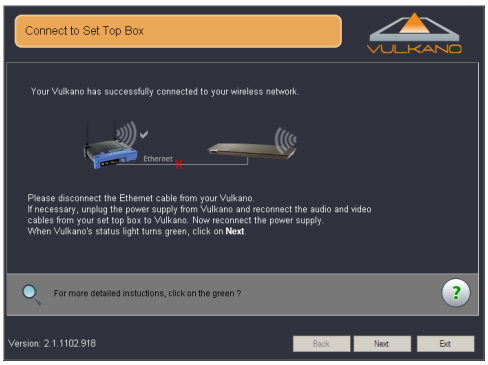
Connect to Set Top Box
VULKANO
Your Vulkano has successfully connected to your wireless network.
Ethernet
Please disconnect the Ethernet cable from your Vulkano.
If necessary, unplug the power supply from Vulkano and reconnect the audio and video cables from your set top box to Vulkano. Now reconnect the power supply.
When Vulkano's status light turns green, click on Next.
For more detailed instuctions, click on the green ?
Version: 2.1.1102.918
Back
Next
Exit

## Select Video Input

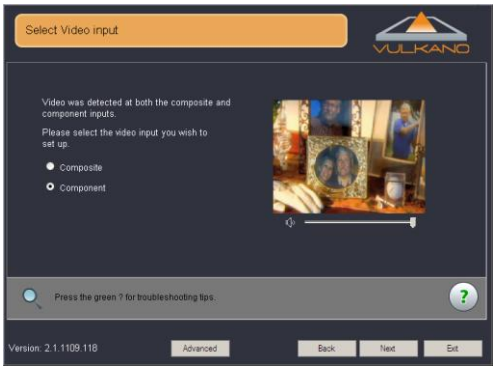


In the Select Video Input window:

1. Select the appropriate video input configuration that corresponds to how you connected Vulkano to your STB:
   - **Composite –** if you used Red/White/Yellow cables

   - **Component –** if you used Red/Green/Blue and Red/White/Yellow cables

2. Click **Next**

When you have selected the correct video input configuration, the video will be displayed in the Video Input Configuration window.

**Note:** This step only appears if you have connected both Composite and Component cables. Otherwise the input is auto-detected.

## Set Up EPG (Electronic Program Guide)

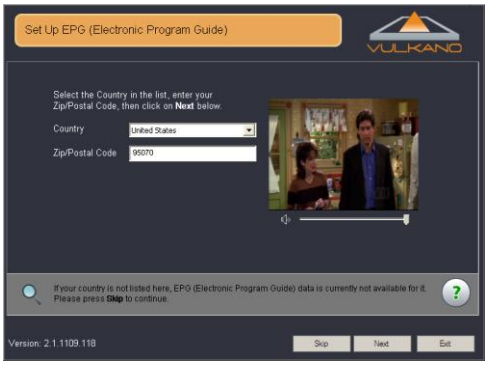
Set Up EPG (Electronic Program Guide)
Select the Country in the list, enter your Zip/Postal Code, then click on Next below.
Country
United States
Zip/Postal Code
95070
If your country is not listed here, EPG (Electronic Program Guide) data is currently not available for it. Please press Skip to continue.
Version: 2.1.1109.118
Skip
Next
Exit

In the Set Up EPG window:

1. Select your **Country**
2. Enter your **ZIP/Postal Code**
3. Click **Next**

**Note:** If your country is not listed here, then the EPG is not available for it. Press **Skip** to continue.

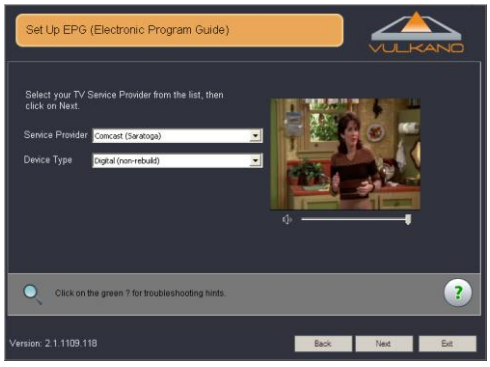


In the Set Up EPG window:

1. Select your **Service Provider** from the drop-down list
2. Select your **Device Type**:
   - **Analog Device**
   - **Digital (non-rebuild)**
3. Click **Next**

**Note:** The ***Analog Device*** option corresponds to SD cable. The ***Digital (non-rebuild)*** option corresponds to HD cable.

# SELECT SET TOP BOX

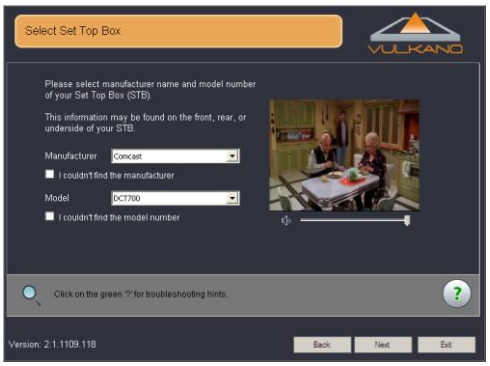
Select Set Top Box
VULKANO
Please select manufacturer name and model number of your Set Top Box (STB).
This information may be found on the front, rear, or underside of your STB.
Manufacturer
Comcast
I couldn't find the manufacturer
Model
DCT700
I couldn't find the model number
Click on the green '?' for troubleshooting hints.
Version: 2.1.1109.118
Back
Next
Exit

In the Select Set Top Box window:

1. Select your STB **Manufacturer**
2. Select your STB **Model**
3. Click **Next**

If you do not know your STB manufacturer name or model number, you can perform one of the following options:

- Select the **I couldn't find the manufacturer** check box option, or
- Select the **I couldn't find the model number** check box option

### *I couldn't find the manufacturer*

Set up Set Top Box control - test code
VULKANO
To be sure that Vulkano can control your Set Top Box properly, select the first code from the list below. Click on Channel Up or Channel Down and wait a few seconds to see if the channel changes. If nothing happens, keep trying codes until you find one which works.
DCT700
C0476 +
C0476
Channel Up
Channel Down
STB Information
Model: DCT700
Code: C0476 +
If you've tried several codes and still are having problems, please click on the green ? for troubleshooting hints.
Version: 2.1.1109.118
Back
Next
Exit

If you selected the **I couldn't find the manufacturer** check box option:

1. Click **Next**
2. Select the first code from the list
3. Click **Channel Up** or **Channel Down** and wait a few seconds to see if the channel changes

If the channel does not change, select the next code from the list and click **Next** again. Repeat this process until you find the code that works.

### *I couldn't find my model number.*

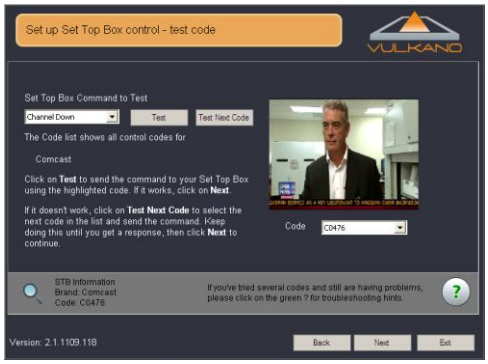
Set up Set Top Box control - test code
VULKANO
Set Top Box Command to Test
Channel Down
Test
Test Next Code
The Code list shows all control codes for
Comcast
Click on Test to send the command to your Set Top Box using the highlighted code. If it works, click on Next.
If it doesn't work, click on Test Next Code to select the next code in the list and send the command. Keep doing this until you get a response, then click Next to continue.
Code
C0476
STB Information
Brand: Comcast
Code: C0476
If you've tried several codes and still are having problems, please click on the green ? for troubleshooting hints.
Version: 2.1.1109.118
Back
Next
Exit

If you selected the **I couldn't find the model number** check box:

1. Click **Next**
2. Select a **Set Top Box** command
3. Click **Test**

If the selected set top box command does not respond, click **Test Next Code** and click **Test**, or select a **Code** from the drop-down list and click **Test**. Repeat this process until you find the code that works.

### *Learning remote control commands*

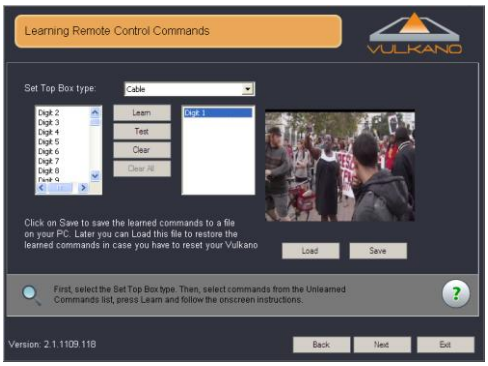


If you have exhausted the list of manufacturer and model number test codes and still have no response from your Vulkano:

1. Select both the **I couldn't find the manufacturer** and **I couldn't find my model number** check box options
2. Click **Next**

In the Learning Remote Control Commands window:

1. Select the **Set Top Box type**
2. Select a command from the Unlearned Commands list
3. Press **Learn**
4. Follow the onscreen instructions

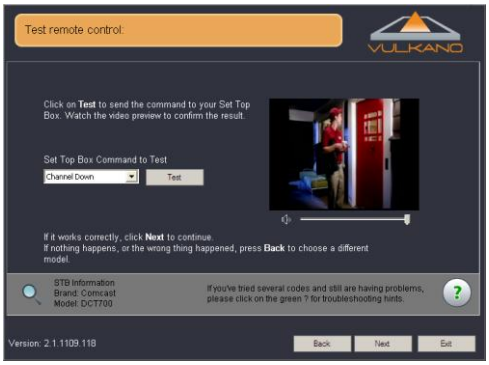


## TEST REMOTE CONTROL

In the Test remote control window:

1. Select a **Set Top Box Command to Test** option
2. Click **Test**

If the STB does not work properly, click **Back** and choose a different model.

3. Click **Next**

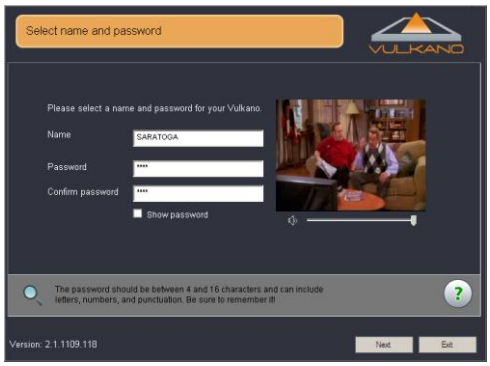


## SELECT NAME AND PASSWORD

In the Select name and Password window:

1. Choose and enter a Name and Password in the **Name** and **Password** fields
2. Re-enter the Password in the **Confirm password** field
3. Click **Next**

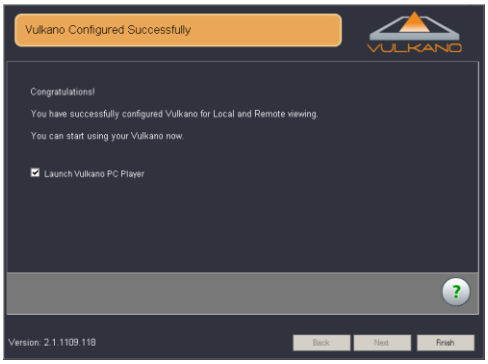
Vulkano Configured Successfully
Congratulations!
You have successfully configured Vulkano for Local and Remote viewing.
You can start using your Vulkano now.
Launch Vulkano PC Player
Finish

## VULKANO CONFIGURED SUCCESSFULLY

Congratulations! You have successfully set up your Vulkano!

- Click **Finish**

## ADDITIONAL HELP

For information about players for PCs, Macs, iPhone/iPads, Androids and Blackberrys, please refer to Download And Install Players on page 57.

For additional help, please refer to Frequently Asked Questions, Troubleshooting and Support on page 58.

## VULKANO SETUP FOR MAC

These steps are for setting up your Vulkano for Windows XP. If you are using Windows 7 or Vista, please refer to the Vulkano Setup For Windows 7 And Vista section on page 36. If you are using Windows XP, please refer to the Vulkano Setup For Windows XP section on page 40.

## CONNECT VULKANO TO THE NETWORK

You can use either a ***wired connection*** or ***Wi-Fi connection*** to connect your Vulkano to your home network.

### *Wired connection*

If your router is close to your Vulkano:

- Connect your Vulkano to your router using the supplied Ethernet cable

**Note:** You can connect your Vulkano to your router, your PC or an open Ethernet connection on your network.

### *Wi-Fi connection*

If you are connecting your Vulkano to your home network through a Wi-Fi connection, then your PC setup wizard will connect wirelessly to your home network.

## CONNECT VULKANO TO THE POWER ADAPTOR

Plug the power adapter into your Vulkano and a wall plug or power strip.

## INSTALL AND RUN THE VULKANO SETUP FOR MAC

To download the Vulkano setup for Mac:

1. Go to: www.myvulkano.com/players.html
2. Click Download now for the Mac Player
3. Launch the downloaded Vulkano setup file

**Note:** It takes a few minutes to download, and then a few more minutes to install.

4. Select **Player > Run Vulkano Setup**

## CHOOSE PASSWORD

In the Choose password window:

1. Choose and enter a password for your Vulkano in the **Password** and **Confirm password** fields
2. Click **Next**

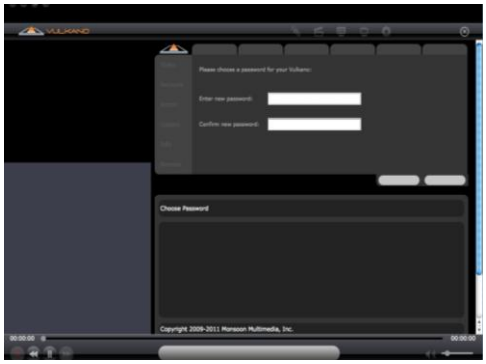

## SET UP WIRELESS SETTINGS

In the Set Up Wireless Settings window:

1. Select your **Home Network** from the drop-down list
2. Enter your **Network Key** or **Passphrase**
3. Click **Next**

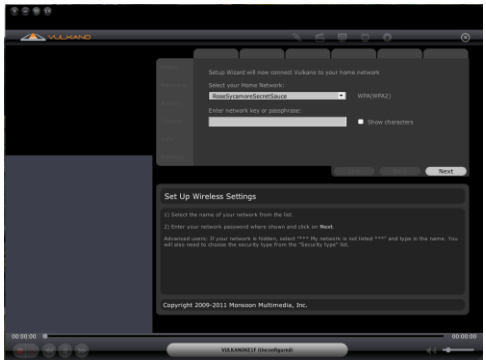

## CONNECT TO WIRELESS NETWORK

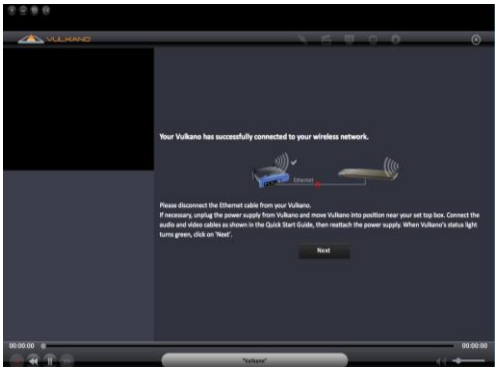
Your Vulkano has successfully connected to your wireless network.
Please disconnect the Ethernet cable from your Vulkano.
Next

Once your Vulkano has been connected to your wireless network, it will no longer be necessary to have your Vulkano connected directly to your router.

1. Disconnect the Ethernet cable from your Vulkano
2. Click **Next** in the Connect to Set Top Box window

**Note:** If necessary, unplug the power supply from your Vulkano and reconnect the audio and video cables from your STB to your Vulkano. Then, reconnect the power supply. When the Vulkano status light turns green, Click **Next** on the Connect to Set Top Box window.

## CONNECT VULKANO TO YOUR STB

Your STB has output connectors on the back for Component setup, Composite setup or both. If you have both, use the Component setup for better video quality. You will need a STB to use Vulkano.

Connect the cables from your STB *output* connectors to your Vulkano's *input* connectors as shown below. For the Component setup option, you will use two sets of cables. For the Composite option, you will only use one set.

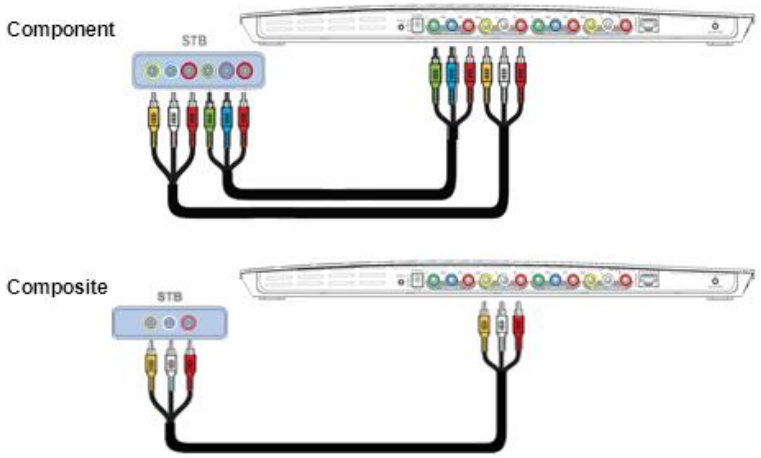


**Suggestion:** Be sure to write down your STB brand and model number. You will need it later in the setup process.

## CONNECT VULKANO TO YOUR TV

This step assumes that your STB was previously connected to your TV. You will re-use your existing cables. For the setup process, it is not mandatory to connect your Vulkano output to a TV. Your TV has audio and video input connectors for Component setup, Composite setup or both. Make sure you use the same cable types, either Component or Composite, for this connection as used in the previous section.

Connect the cables from your Vulkano *output* connectors to your TV's input connectors, as shown below. For the Component setup option, you will use two sets of cables. For the Composite option, you will only use one set.

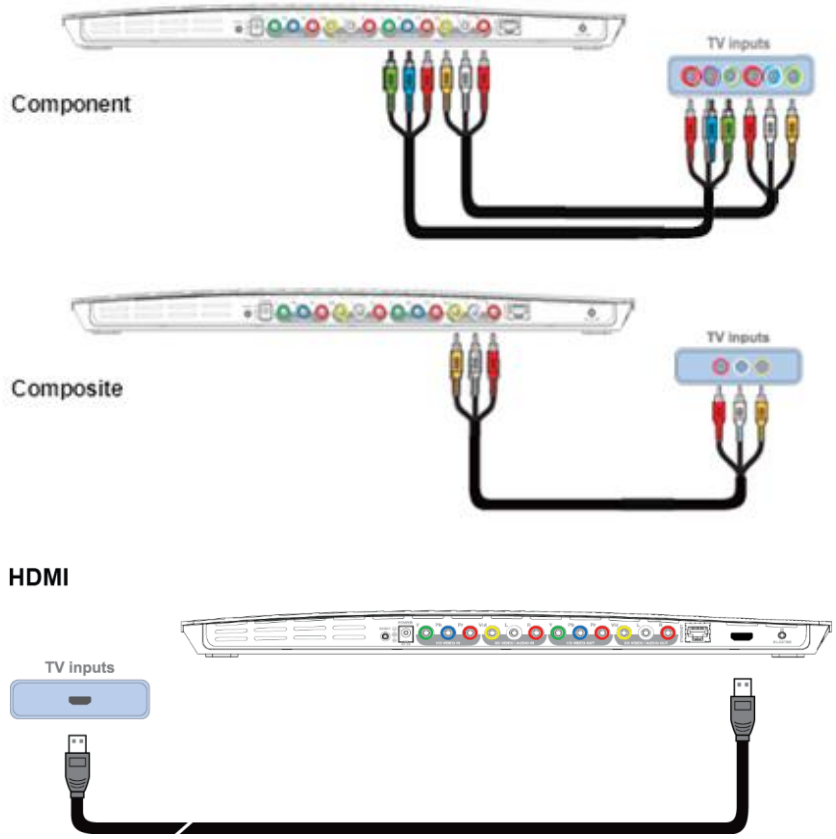


If your TV has an HDMI input connector, use the HDMI setup option for better audio and video quality.

## Select Video Input

In the Select Video Input window:

1. Select the appropriate video input configuration that corresponds to how you connected Vulkano to your STB:
   - **Composite –** if you used Red/White/Yellow cables

   - **Component –** if you used Red/Green/Blue and Red/White/Yellow cables

2. Click **Next**

When you have selected the correct video input configuration, the video will be displayed in the Video Input Configuration window.

**Note:** This step only appears if you have connected both Composite and Component cables. Otherwise the input is auto-detected.

## Set Up EPG (Electronic Program Guide)

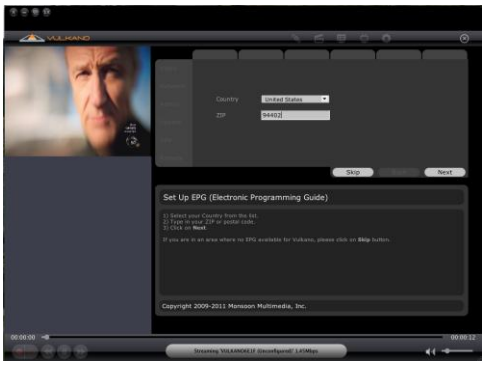

In the Set Up EPG window:

1. Select your **Country** from the drop-down list
2. Enter your **Zip** or **Postal Code**
3. Click **Next**

**Note:** The EPG is supported in the United States. If you are located in another country, click **Skip**.

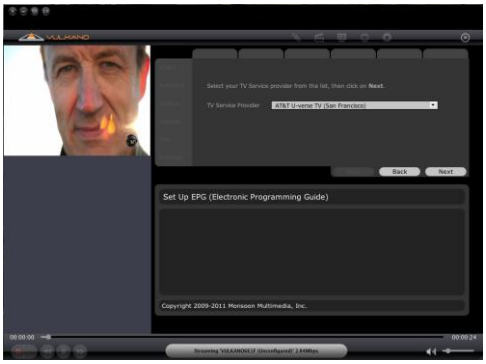

In the Set Up EPG window:

1. Select your **TV Service Provider** from the drop-down list
2. Click **Next**

# SELECT SET TOP BOX

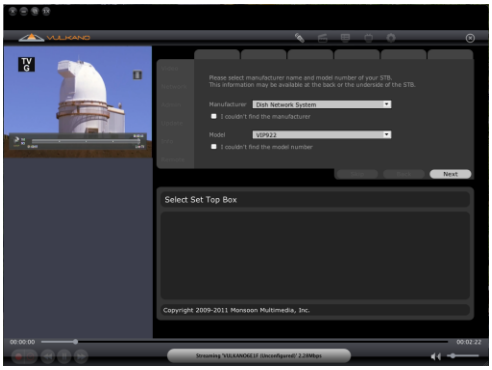

In the Select Set Top Box window:

1. Select your STB **Manufacturer**
2. Select your STB **Model**
3. Click **Next**

If you do not know your STB manufacturer name or model number, you can perform one of the following options:

- Select the **I couldn't find the manufacturer** check box option, or
- Select the **I couldn't find the model number** check box option

### *I couldn't find the manufacturer*

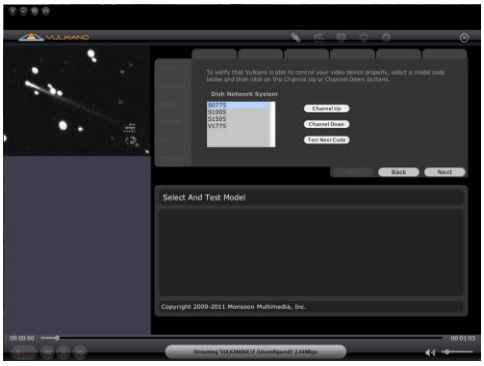

If you selected the **I couldn't find the manufacturer** check box option:

1. Click **Next**
2. Select the first code from the list
3. Click **Channel Up** or **Channel Down** and wait a few seconds to see if the channel changes

If the channel does not change, select the next code from the list and click **Next** again. Repeat this process until you find the code that works.

### *I couldn't find my model number.*

If you selected the **I couldn't find the model number** check box:

1. Click **Next**
2. Click **Channel Up** or **Channel Down** and wait a few seconds to see if the channel changes

### *Learn remote control commands*

If you have exhausted the list of manufacturer and model number test codes and still have no response from your Vulkano:

1. Select both the **I couldn't find the manufacturer** and **I couldn't find my model number** check box options
2. Click **Next**

In the Learning Remote Control Commands window:

1. Select the **Set Top Box type**
2. Select a command from the Unlearned Commands list
3. Press **Learn**
4. Follow the onscreen instructions

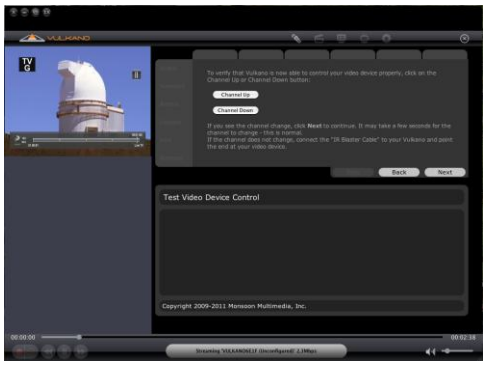


## TEST VIDEO DEVICE CONTROL

In the Test Video Device Control window:

1. Click **Channel Up** or **Channel Down** and wait a few seconds to see if the channel changes
2. Click **Next**

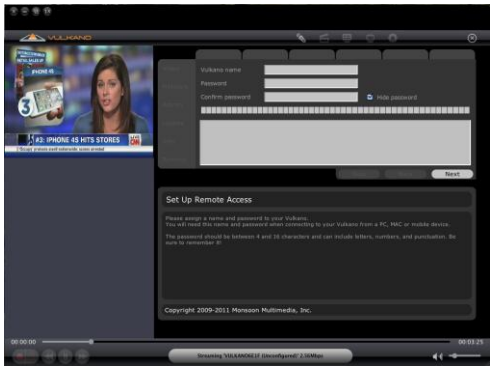


## SET UP REMOTE ACCESS

In the Assign Vulkano Name window:

1. Enter a **Vulkano Name**
2. Enter a **Password** and **Confirm Password**
3. Click **Next**

## VULKANO CONFIGURED SUCCESSFULLY

Congratulations! You have successfully set up your Vulkano!

- Click **Finish**

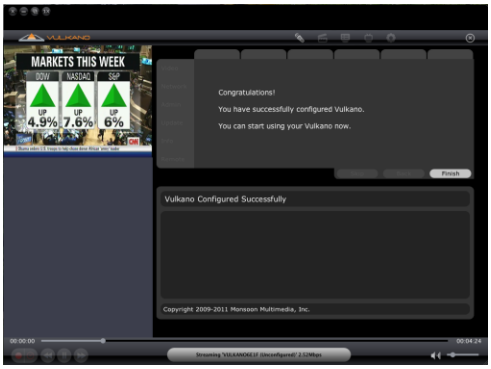


## ADDITIONAL HELP

For information about players for PCs, Macs, iPhone/iPads, Androids and Blackberrys, please refer to Download And Install Players on page 57.

For additional help, please refer to Frequently Asked Questions, Troubleshooting and Support on page 58.

## SETUP THE STB CONTROL

Vulkano uses the same technology found in a universal remote control to send control codes for a wide variety of STBs. The invisible light signal is sent from the small dark window at the front left of your Vulkano (when looking at it from the front). This signal is strong enough, in many cases, to bounce off the walls of your room and back into your STB's remote control detector window (which is often behind a dark piece of plastic on the front panel).

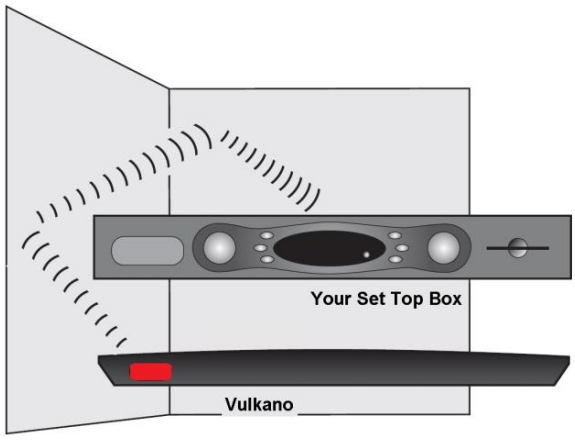


However, sometimes there may be a problem with the light getting from your Vulkano to your STB. If you have no luck at all in getting your STB to respond, you should use the ***IR Blaster cable*** which came with your Vulkano kit. Insert the plug into the hole label **IR Blaster**, located on your Vulkano's rear panel. The location of the IR Blaster jack depends on the model of your Vulkano device.

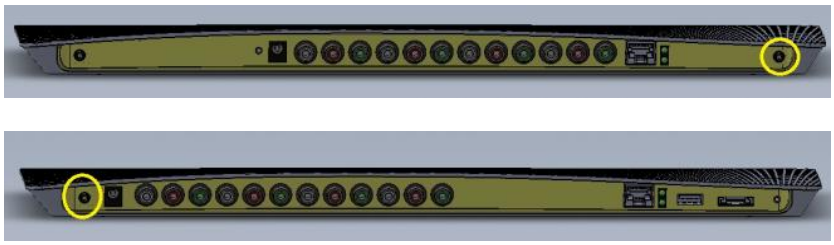

## IR BLASTER CABLE

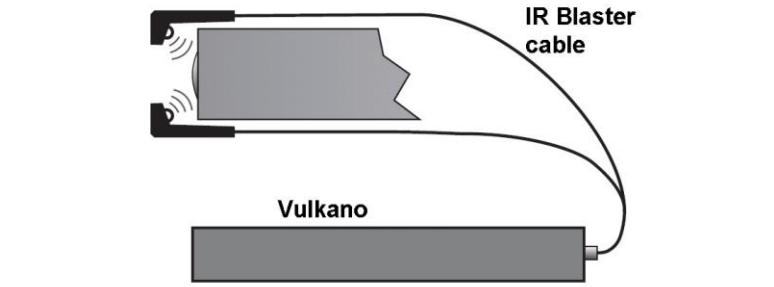


Side View

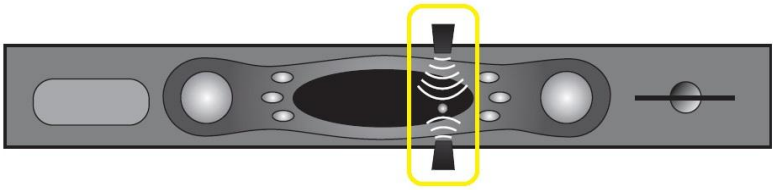

Front View

## IR BLASTER TIPS:

- Make sure the infrared (IR) emitter is plugged into the correct jack, located on the back of your Vulkano.
- If you have a digital camera, camcorder, or cell phone with a digital camera in it, you can put it into preview mode and point it at the emitter while sending out some test codes. It is best to do this in a dark room. If it is working, the digital camera will display the emitter LED flashing white.
- Make sure the IR emitter is placed in front of the video source so it can "see" the IR remote-control receiver built into the video device. Think of the IR emitter as a remote control you are holding: where do you point your remote control to operate the video device?
- Try adjusting the distance between the IR emitter and the video source. Sometimes placing it closer helps; sometimes placing it further away helps. Also, check the angle at which it is pointed.
- Make sure no light is reflecting off the front of the video device that would interfere with the reception of the invisible IR light beam.
- Finally, select a different code. Often, if the IR emitter is working, but the wrong code is selected, some of the functions will cause a reaction in the video source - just the wrong one. (For instance, testing the number "**2**" will result in turning the unit Power on/off). This is a sign you need to try a different code.

# DOWNLOAD AND INSTALL PLAYERS

### *PC*

- Download Vulkano PC Player to your PC from www.myvulkano.com/players.html
- Install and run Vulkano Player
- Select **Run Vulkano Player** if you already set up Vulkano
- Go to **Player > Add or Select Vulkano > Add** and enter the name and password of your Vulkano
- Select **Watch TV** to get started

### *Mac*

- Download Vulkano Mac Player to your Mac from www.myvulkano.com/players.html
- Install and run Vulkano Player
- Go to **Player > Add/Select Vulkano > Add** to enter the name and password of Vulkano
- Go back to the Home screen and push **Watch TV** to get started

### *iPhone/iPad*

- Download Vulkano Player to your iPhone or iPad from the iTunes App Store
- Go to **Settings>Select** to enter the name and password of Vulkano
- Go back to the Home screen and push **Live TV** to get started

### *Android*

- Download Vulkano Player to your phone from Android Market
- Install and run Vulkano Player
- Go to **Settings > Selected Vulkano > Add Vulkano**
- Enter the name and password of Vulkano
- Go back to the Home screen and push **Live TV** to get started

### *Blackberry*

- Download Vulkano Player to your phone from Blackberry Apps World
- Install and run Vulkano Player
- Go to **Settings > Selected Vulkano > Add Vulkano**
- Enter the name and password of Vulkano
- Go back to the Home screen and push **Live TV** to get started

## FREQUENTLY ASKED QUESTIONS

For frequently asked questions, go to: http://www.myvulkano.com/support_faq.html.

## TROUBLESHOOTING

For additional information or technical assistance for your Vulkano product, go to Monsoon's Technical Support Website at: http://www.myvulkano.com/support.html.

## SUPPORT

9:00 AM to 9:00 PM PST (Monday – Saturday)
phone: +1 (866) 937-4282
e-mail: SUPPORT@MONSOONMULTIMEDIA.COM